



*The CE mark indicates RoHS2 compliance. Please refer to the CE Declaration of Conformity for additional details.

E30E Series

Branch Circuit Power Meter with Ethernet Communication

Product Overview

The E30E Series panelboard monitoring system is designed to measure the current, voltage, and energy consumption of up to 92 circuits (84 branch circuits, two 3-phase mains, two neutrals), enabling users to monitor two panelboards or an entire data center PDU with a single product.

The E30E consists of a data acquisition module and up to four branch current sensor strips, with eight auxiliary inputs. The strips have rows of solid-core CTs and can be mounted on each side of the panel board along the termination points of each breaker. The conductor passes through the appropriate current sensor before terminating at the breaker. Each strip transmits the current data to the data acquisition board. The E30E measures both current and power for the mains and branch circuits. The E30E can easily accommodate different panel configurations, including any combination of multi-phase breaker positions, voltage phase mapping, and breaker sizes. To configure the E30E for operation, download the NetConfig configuration software tool and the E3x Commissioning Guide from www.veris.com/modbus_downloads.

Data is transmitted via Ethernet with Modbus TCP, BACnet IP, or SNMP protocol, or via RS-485 with Modbus RTU or BACnet MS/TP protocols. Some protocols can be used simultaneously, and the Ethernet protocols all support access by multiple masters. Each data acquisition board requires two Modbus addresses, one for each set of two current sensor strips and four auxiliary inputs (2-strip models only require one Modbus address). When a circuit exceeds the user-defined thresholds, the E30E activates the alarm indicators. The communication interfaces and protocols require some configuration at the time of installation.

Product Identification

	CT Option	# of CTs
E30E	<div><div></div><div>0 = 100A, 3/4" spacing</div><div>1 = 100A, 1" spacing</div><div>2 = 100A, 18 mm spacing</div></div>	<div><div></div><div>24 = 2 strips with 12 sensors each, with two 4 ft (1.2 m) ribbon cables *</div><div>36 = 2 strips with 18 sensors each, with two 4 ft (1.2 m) ribbon cables *</div><div>42 = 2 strips with 21 sensors each, with two 4 ft (1.2 m) ribbon cables</div><div>48 = 4 strips with 12 sensors each, with four 4 ft (1.2 m) ribbon cables *</div><div>72 = 4 strips with 18 sensors each, with four 4 ft (1.2 m) ribbon cables *</div><div>84 = 4 strips with 21 sensors each, with four 4 ft (1.2 m) ribbon cables</div></div>

* This option available with 18 mm spacing only.

Regulatory Information



DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- This product must be installed inside a suitable fire and electrical enclosure.
- Follow safe electrical work practices. See NFPA 70E in the USA, or applicable local codes.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Do not use this product for life or safety applications.
- Do not install this product in hazardous or classified locations.
- Read, understand and follow the instructions before installing this product.
- Turn off all power supplying equipment before working on or inside the equipment.
- Product may use multiple voltage/power sources. Disconnect ALL sources before servicing.
- Use a properly rated voltage sensing device to confirm that power is off. DO NOT depend on this product for voltage indication.
- Current transformer secondaries (current mode) must be shorted or connected to a burden at all times.
- Products rated only for basic insulation must be installed on insulated conductors.
- Replace all doors, covers and protective devices before powering the equipment.
- The installer is responsible for conformance to all applicable codes.

Failure to follow these instructions will result in death or serious injury.

A qualified person is one who has skills and knowledge related to the construction and operation of this electrical equipment and installations, and has received safety training to recognize and avoid the hazards involved. NEC Article 100
If this product is used in a manner not specified by the manufacturer, the protection provided by the product may be impaired. No responsibility is assumed by the manufacturer for any consequences arising out of the use of this material.

Provide a disconnect device to disconnect the meter from the supply source. Place this device in close proximity to the equipment and within easy reach of the operator, and mark it as the disconnecting device. The disconnecting device shall meet the relevant requirements of IEC 60947-1 and IEC 60947-3 and shall be suitable for the application. In the US and Canada, disconnecting fuse holders can be used. Provide overcurrent protection and disconnecting device for supply conductors with approved current limiting devices suitable for protecting the wiring.

Control system design must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop and over-travel stop.



WARNING

LOSS OF CONTROL

- Assume that the system will reach a safe state during and after a control path failure.
- Separate or redundant control paths must be provided for critical control functions.
- Test the effect of transmission delays or failures of communication links.¹
- Each implementation of equipment using communication links must be individually and thoroughly tested for proper operation before placing it in service.

Failure to follow these instructions may cause injury, death or equipment damage.

¹For additional information about anticipated transmission delays or failures of the link, refer to NEMA ICS 1.1 (latest edition). *Safety Guidelines for the Application, Installation, and Maintenance of Solid-State Controls* or its equivalent in your specific country, language, and/or location.

FCC PART 15 INFORMATION

NOTE: This equipment has been tested by the manufacturer and found to comply with the limits for a class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. Modifications to this product without the express authorization of the manufacturer nullify this statement.

This Class A digital apparatus complies with Canadian ICES-003.)



This symbol indicates an electrical shock hazard exists.



Documentation must be consulted where this symbol is used on the product.

Specifications

VOLTAGE INPUTS	
Measurement Voltage	90 to 300 Vac line-to-neutral, 50/60 Hz
Control Power	100 to 277 Vac line-to-neutral, 50/60 Hz, 15 VA max.
ACCURACY	
Power/Energy	IEC 62053-21 Class 1, ANSI C12.1-2008 (1% system accuracy includes both the E30E main unit and branch CTs)
Voltage	±0.5% of reading 90 to 277 Vac line-to-neutral
Current	±0.5% of reading
Minimum ON current	50 mA
OPERATION	
Sampling Frequency	2560 Hz
Update Rate	Modbus: 1.8 seconds (both panels) BACnet: 14 seconds SNMP: 20 seconds
ETHERNET COMMUNICATION	
Physical Interface	RJ45 connector with 10/100 Mbit Ethernet
Protocols Supported	Modbus TCP, BACnet IP, SNMP V2c
SERIAL COMMUNICATION	
Physical Interface	2-wire RS-485
Serial Protocols Supported	Modbus RTU or BACnet MSTP
Address Range	1 to 247 for Modbus RTU; 0-127 for BACnet MS/TP
Baud Rate	9600, 19200, 38400
Parity	Modbus RTU: NONE, ODD, EVEN BACnet MS/TP: NONE (fixed)
Communication Format	8 data bits, 1 start bit, 1 stop bit
Termination	2x3 position connector
Wire Size	Up to 16 AWG
WIRE SIZE RANGE	
Aux CT Terminals on Main Board	24 to 14 AWG
Removable Connectors on Main Board	22 to 12 AWG
TERMINAL BLOCK TORQUE	
Aux CT Terminals on Main Board	3.5 to 4.4 in-lb (0.4 to 0.5 N-m)
Removable Connectors on Main Board	4.4 to 5.3 in-lb (0.5 to 0.6 N-m)
MECHANICAL	
Ribbon Cable Support	4 ft. (1.2 m) round ribbon cable ships standard; Up to 20 ft. (6 m) flat or round available
OPERATING CONDITIONS	
Operating Temperature Range	0 to 60 °C (32 to 140 °F) (<95% RH non-condensing)
Storage Temperature Range	-40 to 70 °C (-40 to 158 °F)
Altitude of Operation	3000 m max.
COMPLIANCE INFORMATION	
Agency Approvals	UL508 open type device**, IEC/EN61010-1
Installation Category*	Cat III, pollution degree 2***
Conducted and Radiated Emissions	FCC part 15 Class A, EN55011/EN61000-6-4 Class A (heavy industrial)
Conducted and Radiated Immunity	EN 61000-6-2 and EN 61326-1

* For indoor use only.


** The E30E must be installed in an appropriate electrical and fire enclosure per local regulations. If Veris E30E products are used in installations with circuits higher than the product ratings, the circuits must be kept segregated per UL508A Sec. 17.5. Note: E30E internal circuitry (cables and CTs) are not circuits as defined by UL508A, as they do not extend beyond the E30E itself without further safety/fire isolation.

*** A Pollution Degree 2 environment must control conductive pollution and the possibility of condensation or high humidity. Consideration must be given to the enclosure, the correct use of ventilation, thermal properties of the equipment and the relationship with the environment.

Table of Contents


Safety Considerations	4
Dimensions	5
Product Diagram	6
Data Outputs	7
Solid-Core Current Sensors	8
Installation	9
Wiring	11
Gateway Configuration	14
BACnet PICS	25
General BACnet Programming Information	26
General SNMP Programming Information	27
Commissioning	27
Recommended Accessories	27
Troubleshooting	28
China RoHS Compliance Information (EFUP Table)	28
Appendix: Panel Configuration Diagrams and Selection Matrix	29

Dimensions

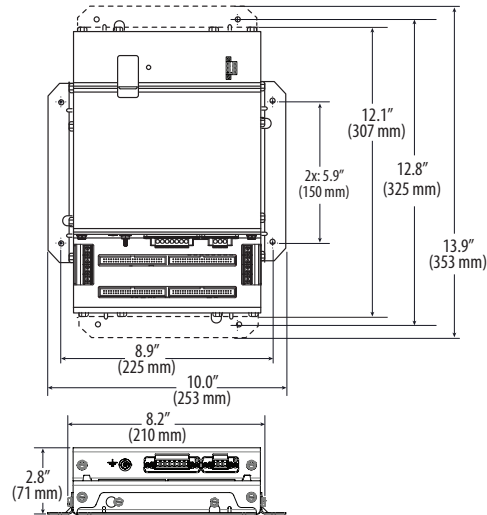


Note: The dotted lines indicate dimensions if the brackets are placed for horizontal mounting. At the factory, the brackets are placed for vertical mounting. See Installation section for more information.

Current Sensor Strips

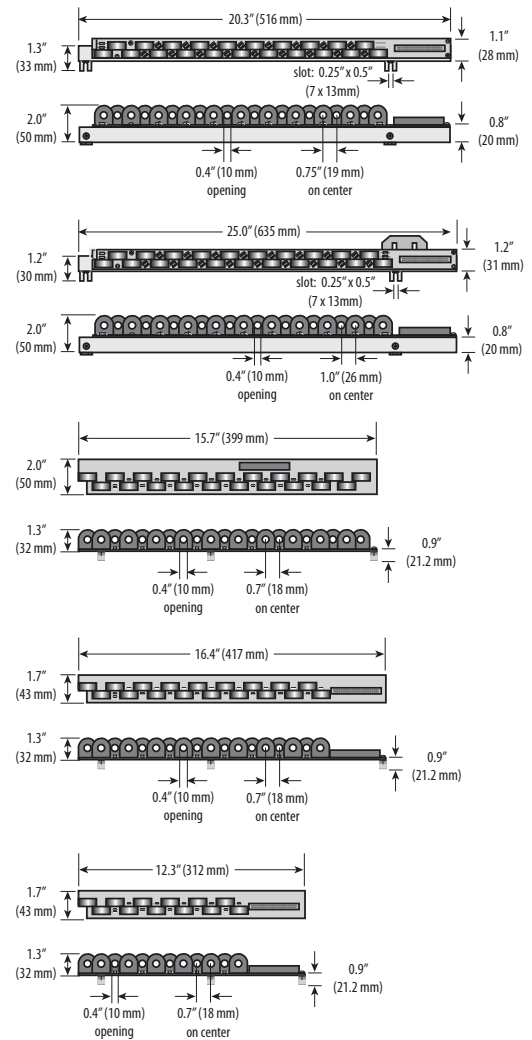

Product Diagram

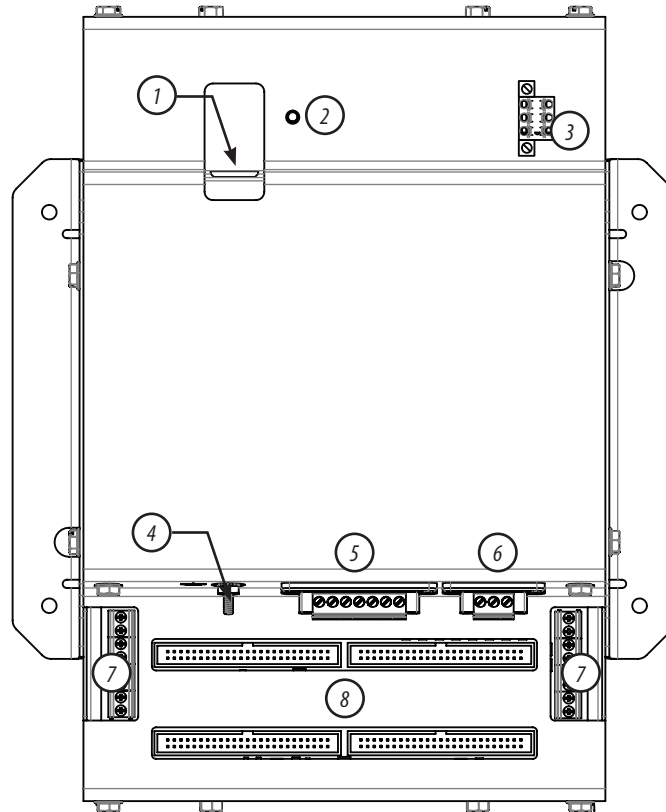

1. Ethernet Port: Provides Ethernet connection for the gateway component.
2. Power LED: Indicates power is applied to the meter.
3. 2x3 RS-485 serial connection.
4. Protective ground connection.
5. Voltage Taps: 1, 2, or 3 phase plus neutral connections. For voltage sensing and power calculations.
6. Control Power Connection: Provides power to operate the meter.
7. Auxiliary CT Inputs: These 0.333 Vac inputs are used for monitoring the main breaker or other high amperage source. Inputs on the left are for panelboard 2; inputs on the right are for panelboard 1.
8. 50-Pin Ribbon Cable Connectors: 48-inch (1220 mm) ribbon cables are provided for easy connection of the current sensor strips to this point of the data acquisition board. Other ribbon cable lengths are available (sold separately) The two connectors on the left are for panelboard 2; the two on the right are for panelboard 1.

Connect current sensor strips to the correct ribbon cable connectors for each panel. The top connectors are for the strip labeled Panel B, and the bottom connectors are for the strip labeled Panel A.

Data Outputs

The E30E Series provides several types of measurements that give a comprehensive view of power consumption for every load on the panel:

- **Real-time measurements:** A live and up-to-date view of present power levels and the factors that affect them.
- **Demand measurements:** Averages of values measured over a specified time interval. The time interval (typically 15 minutes) can be set from 10 seconds to more than a day. The demand calculation can be configured to use single intervals or the sliding average of up to 6 sub-intervals. Demand measurements are useful for tracking or graphing load levels over time to correlate with total energy consumption.
- **Historic maximum measurements:** These measurements store the largest value recorded for a specific measurement since the last time they were cleared. They are useful for identifying peak levels critical to equipment sizing or demand limits in utility agreements.
- **Accumulated energy measurements:** Ongoing totals of cumulative energy used since the last time the value was cleared. Energy values provide the informational basis for billing, cost allocation, carbon offset, BTU equivalent calculations, and other applications of overall energy use.
- **Energy snapshots:** Energy totals that only change when the demand intervals are updated. They are samples of the free-running energy accumulators at the end of each demand interval, as configured by the user. These provide energy readings that are easily correlated to the demand values to simplify the tasks of sub-billing and cost allocation.
- **Alarms:** Provide a warning of excessively high or low current on each branch and aux channel. The user can set two high-level and two low-level thresholds, and a delay time for latching alarms. Alarms are reported as both non-latched events and latched events. Non-latching alarms are active while the current exceeds the threshold, but go inactive if the current returns to a level within the specific thresholds. Latching alarms become active when the current exceeds the threshold for a time period greater than the specified delay and remain active until they are cleared remotely. Alarm status can be polled via any protocol. Via BACnet, Subscribe_COV can be used to generate alarm notifications. Via SNMP, alarms drive SNMP event notifications.

Advanced Features - The E30E supports a number of advanced features. Some are always active, and others are configured manually via Modbus register 62017, BACnet object AV164, or SNMP MIB variable "spanels/panel1/p1Configuration/p1Setup/p1UserDefinedSettings" (OID .1.3.6.1.4.1.40845.1.30.1.1.6.3.4.0). For models with 42 channels or more, these features are configured independently for each panel.

- **Logical meter support:** The E30E can be configured to map any set of 1, 2 or 3 channels that are adjacent in the panel to a logical meter, referred to in the point map as a logical circuit, that provides accurate multi-phase measurement totals. Map these logical circuits by writing the desired logical circuit number into a set of registers/data objects provided for each branch and aux channel (per panel).
- The channels assigned to each logical circuit must be adjacent in the panel (usually used for multi-phase breakers), but there are no limitations on where those adjacent channels are aligned in the panel (any position where a multi-phase breaker can be installed). This functionality is always active, but a user selection affects the how the data can be accessed via Modbus. Measurement data via Modbus for logical circuits is presented in two ways, arranged either by logical circuit number (looks more like a collection of individual meters) or by measurement type (arranged similar to the single-phase data section of the point map).
- **Legacy point map or alternate logical circuit point map:** The E30E can be configured to select a preferred version of the Modbus registers in the address range 4000 to 9999. If enabled (default), the logical circuits by measurement type is active. Otherwise, the legacy point maps for 2-phase and 3-phase breakers used in E3x models with a firmware version earlier than 1.023 is active. The logical circuits functionality can also be accessed via the "Logical Circuits by Circuit" section of the point map (address range 10000 to 45000), regardless of the state of this selection.
- **Phase angle measurements:** The E30E measures the phase angle of every voltage and current input and presents these measurements (in degrees) in additional data registers/objects. These values are used to verify that current inputs are assigned to the proper voltage phases and to help determine how power factor variations are influenced by current phase changes vs. harmonic distortion. Phase angle measurements are instantaneous and always active.
- **User CT phase assignment:** In the default mode, the E30E assigns each channel to the corresponding phase that most 3-phase panels implement, so that the user does not have worry about it. The user can opt to replace this self-assignment paradigm with a mode that allows explicit specification of the phase assignment for each channel. The explicit assignments set by the user are stored by the E30E in non-volatile memory.
- **Phase angle reference:** The E30E measures the phase angle of every current and voltage input. The user can select whether the phase angles are stated relative to an absolute reference (the phase angle of voltage input V1) or relative to the voltage phase assigned to that specific current input channel.
- **Demand/snapshot time interval source:** The E30E offers two mechanisms for driving the demand/snapshot time interval, an interval timer or an RTC (real-time clock). The legacy mode (default) uses an interval timer that does not need to be set to an absolute time. When using the interval timer the demand/snapshot interval can be set from

Data Outputs (cont.)

10 to 32767 seconds (over 9 hours). An alternate mode utilizes an RTC set to a specific date and time to synchronize the results with a larger system. The RTC must first be set in order to run and capture demand values and energy snapshots. When power is interrupted, the RTC resets to a default date and time and must be set again in order to run. When using the RTC, the demand/snapshot interval can be set from 10 to 3600 seconds (1 hour).

Monitoring of Mains	
Real Time Measurements	Current: multi-phase average and per phase
	Current phase angle
	Real power (kW): multi-phase total and per phase
	Apparent power (kVA): multi-phase total and per phase
	Power factor: multi-phase average and per phase
	Voltage - L-L: multi-phase average and per phase
	Voltage - L-N: multi-phase average and per phase
	Frequency (phase A)
Demand Measurements	Current present demand: multi-phase average and per phase
	Real Power (kW) present demand: multi-phase average and per phase
Historic Maximums	Maximum instantaneous current: multi-phase average and per phase
	Maximum current demand: multi-phase average and per phase
	Maximum real power demand: multi-phase total and per phase
Accumulated Energy	Energy (kWh): multi-phase total and per phase
Energy Snapshots	Energy (kWh): multi-phase total and per phase
Monitoring of Branch Circuits	
Real Time Measurements	Current: multi-phase average and per phase
	Current phase angle per branch
	Real power (kW): multi-phase total and per phase
	Apparent power (kVA): multi-phase total and per phase
	Power factor: multi-phase average and per phase
Demand Measurements	Current present demand: multi-phase average and per phase
	Real power (kW) present demand: multi-phase average and per phase
Historic Maximums	Maximum instantaneous current: multi-phase average and per phase
	Maximum current demand: multi-phase average and per phase
	Maximum real power demand: multi-phase total and per phase
Accumulated Energy	Energy (kWh): multi-phase total and per phase
Energy Snapshots	Energy (kWh): multi-phase total and per phase
Modbus Alarms	
Alarms	Voltage over/under
	Branch current over/under
	Mains current over/under

Solid-Core Current Sensors

100 A Solid-Core Current Sensor	
Voltage Rating	300 Vac
Measurement Range	120 A*
Temperature	0 to 60 °C
Agency	EN61010-1

* Momentary.

Installation




Observe precautions for handling static sensitive devices to avoid damage to the circuitry that is not covered under the factory warranty.


Disconnect power to the panel before beginning the installation.

1. Determine where you will mount the E30E measurement unit. The preferred location is inside the enclosure of the panelboard being monitored. If sufficient space is not available there, then mount the unit in an appropriate enclosure nearby. Decide whether to mount the E30E vertically or horizontally. The E30E is shipped with the brackets placed on the two sides for vertical mounting. If desired, you can move the brackets from the sides to the ends of the housing. Loosen the screws on the sides of the E30E that hold the brackets in place (do not fully remove the screws from the E30E housing). Loosen the screws on the two ends of the housing (do not fully remove the screws from the E30E housing), and set the brackets into their new positions. Tighten all screws.

Vertical Mounting

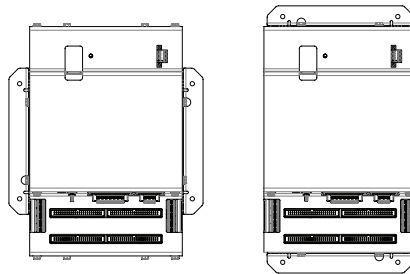

Horizontal Mounting

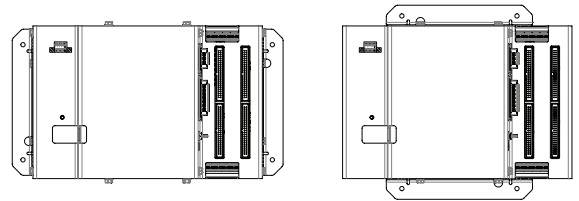


Install the E30E in the panel (hardware not provided). A grounding connection is located on the housing (see below).


The protective ground connection on the housing (item 4 in the Product Diagram) should be used if the E30E will not be mounted to a suitably grounded surface. Assure conductivity to the protective ground.

2. Install the branch current sensor strips into the panel. Select one of the four circuit configurations shown below and arrange the CTs strips accordingly. For more detailed installation diagrams and help identifying what circuit configuration setting to use, refer to the appendix titled: Panel Configuration Diagrams and Selection Matrix. Adjust orientation of the circuit numbers in the field during commissioning by writing to Modbus Register 6 or use the free NetConfig configuration software at www.veris.com. Most of the examples in this graphic show the 21 current sensor strips. The same configuration options are available for the 18 and 12 current sensor strips.

Installation (cont.)

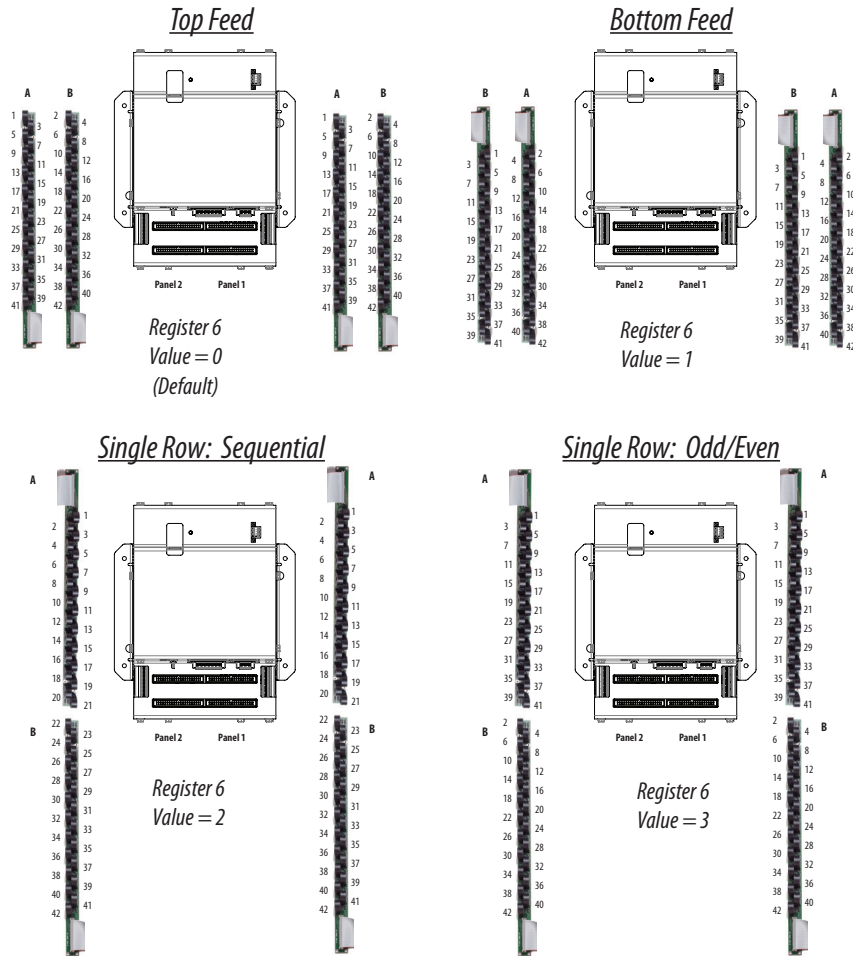


3. Verify that the serial numbers printed on the current sensor strips and on the E30E match. The board and the strips are sold as a calibrated set.
4. Connect the current sensor ribbon cables to the 50-pin connectors on the E30E. The label on the strip indicates which connector to use on the E30E (e.g. connect the strip labeled "Panel 1A" to the bottom right connector on the board). Orient the cables so that the plastic key on the E30E connector aligns with the keyhole cutout on the ribbon cable connector, as shown below.

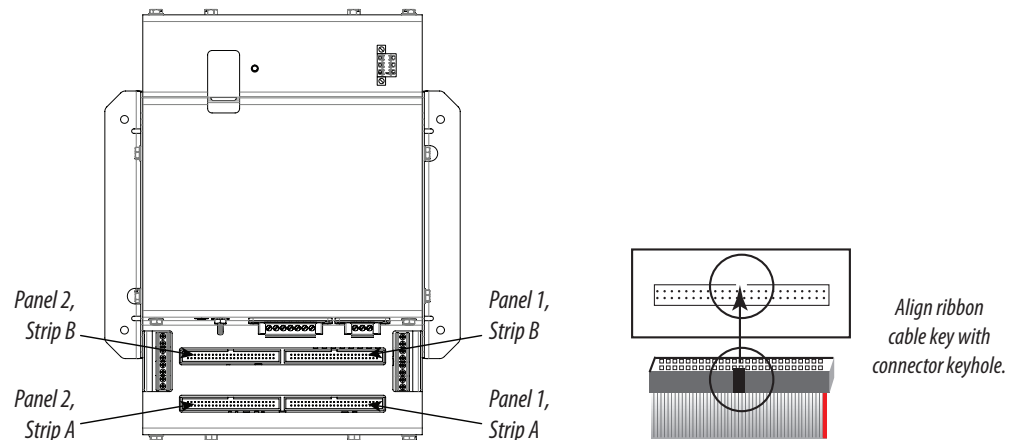

Auxiliary CT Installation

1. Connect 0.333 Vac current transformers (CTs) to the mains or other conductors to be monitored, observing local codes. Refer to the appropriate CT installation instructions for further information.

Installation (cont.)

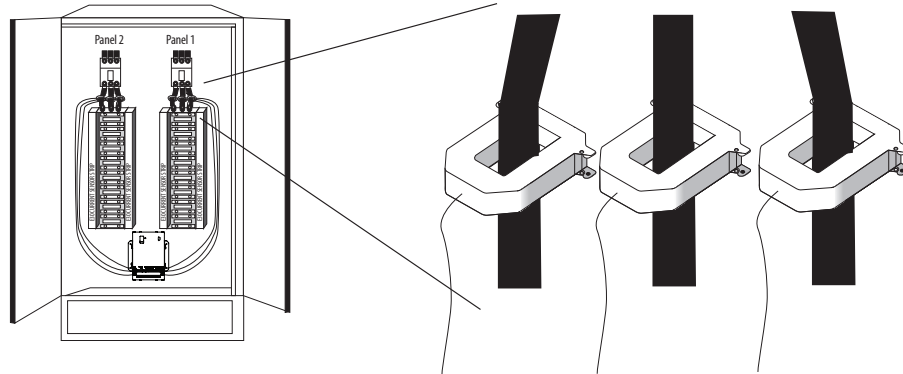

Note: The E30E measures and reports the phase angle of each voltage input and each CT (when there is active current through the primary of that CT). Use the NetConfig configuration software tool to view the phase angles of active circuits to help verify that those circuits are connected to and mapped to the proper voltage phases. See the E3x Commissioning Guide (www.veris.com) for instructions on how to download and operate the tool from a PC.

Wiring

DANGER


HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- While removing or installing panels and covers, assure that they do not contact an energized bus.
- NEVER bypass external fusing.
- NEVER short the secondary of a potential transformer.
- Before closing covers and doors, carefully inspect the work area and remove any tools, wire scraps or other objects that may have been left inside the equipment.

Failure to follow these instructions will result in death or serious injury.


For all steps in this section, when tightening terminals, apply the correct torque.

Figure 8

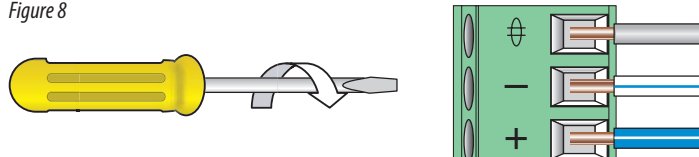


Aux Inputs: 3.5 to 4.4 in-lb (0.4 to 0.5 N-m); all other terminals: 4.4 to 5.3 in-lb (0.5 to 0.6 N-m).

1. Wire the Aux input CTs to the E30E. Note: For Veris CTs, X1 is the white lead, X2 is the black lead.

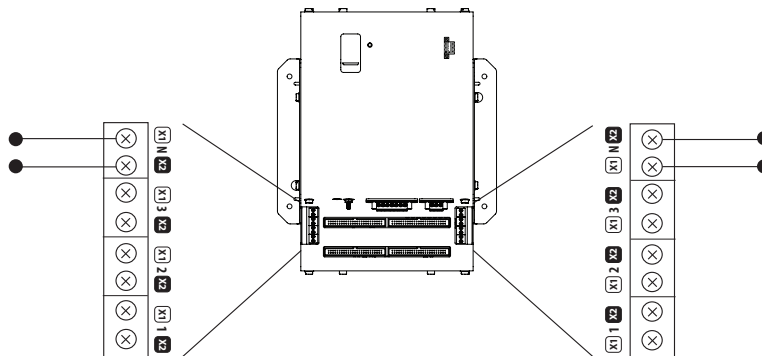


Wiring (cont.)

2. Connect 2-wire 100 to 277 Vac power to the control power terminals. Observe polarity. Connect voltage lines to the voltage taps. Provide overcurrent protection and disconnecting means to protect the wiring. Use Veris AH02, AH03, AH04, or equivalent. Suggested: 0.5 A, time delay fuses.

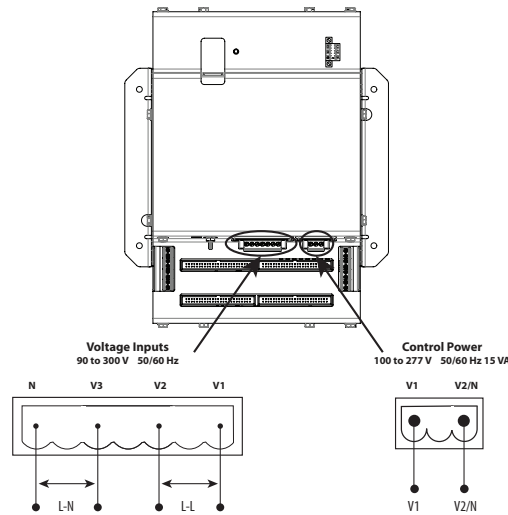

Voltage taps are shared by both panels.

Wiring configurations:

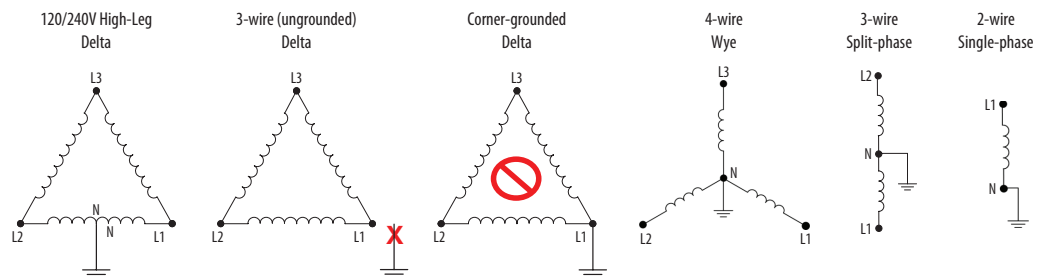

120 V/240 V Delta High Leg (where the center tap of one of the three phase-to-phase transformers is grounded): the E3x supports these applications, as long as the line-to neutral voltage [especially of the High Leg] does not exceed 300 Vac (as in North American 120/240 V High Leg Delta configurations).

In 3-wire (ungrounded) Delta applications, the E3x supports these applications with the following caveats:

Control Power for the meter cannot exceed 277 Vac. In applications where the L-L voltage is 277 Vac or less (e.g. 208 V line-to-line) it can be connected to two of the phases being monitored without exceeding the limit. For higher voltages (e.g. 480 V line-to-line), this must be supplied from a source that is 277 Vac or less. It could be a separate source or a transformer can be used to step it down from two of the phases being measured.


All of the CT inputs (both branches and Aux inputs) are neutral-referenced. One side of each CT is essentially connected directly to the neutral voltage input. If this is left floating, the solid-core CT strips, split-core CT adapter boards and all CTs will float at the same potential (while the panel is energized). This does not present a risk to the equipment as long as it is within 300 V of ground, but should be considered from a safety perspective in the overall application. The E3x will provide measurements in this application with the accuracy specified, with the exception of line-to-neutral voltages, which will be calculated and reported, based on a derived virtual neutral voltage, even though they are not relevant.

Corner-grounded delta: the E3x does not support these applications at any voltage level.

The E3x supports measurement of all 4-wire Wye, 3-wire split-phase and 2-wire single phase and configurations that operate between 90 and 300 Vac line-to neutral.


Wiring (cont.)

3. Connect the 2-wire Modbus RS-485 network.

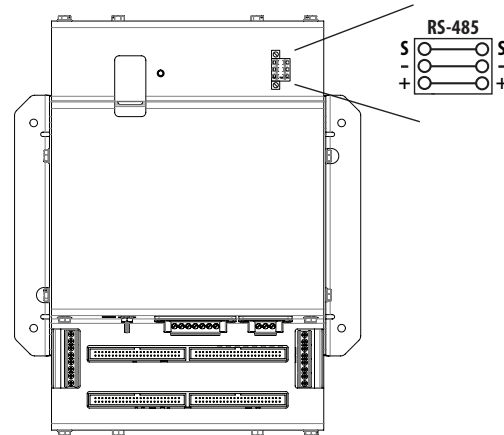


4. Mechanically secure the RS-485 cable(s) where it/they enter the electrical panel.
5. If using Modbus RTU or BACnet MS/TP protocol, connect serial cable(s) from the RS-485 loop to the serial connector on the E30E. Connect all RS-485 devices in a daisy-chain, and properly terminate the chain. Two sets of connections are provided to simplify daisy-chain connections and enable retention of each wire. Follow all applicable wiring and termination connection guidelines for the standard in use.

Note that while both the Modbus RTU and BACnet MS/TP standards identify requirements for RS-485 line polarization/bias and termination, the value and placement of these resistors varies for each standard. The E30E does not implement any RS-485 line polarization/bias or termination internally. For the RS-485 cable, use shielded, twisted-pair wire that is voltage-rated for the installation. The shield is not internally connected to Earth Ground. Connect the shield to Earth Ground somewhere on the RS-485 bus (single point connection only).

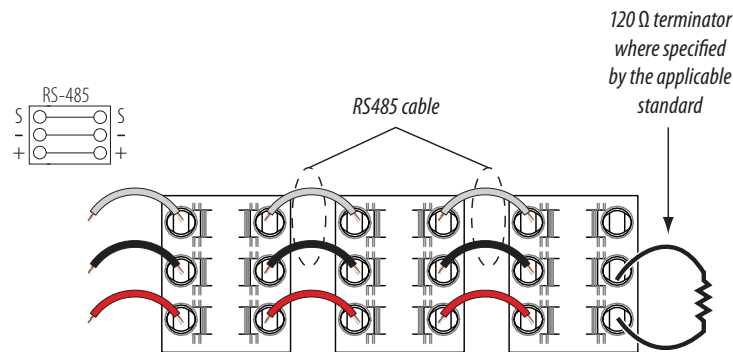

6. Connect an Ethernet cable to a local PC. Secure a ferrite filter (included) around the Ethernet cable to ensure the device meets emission requirements. Use the PC to configure the gateway. See the Gateway Configuration section of this document for further information.

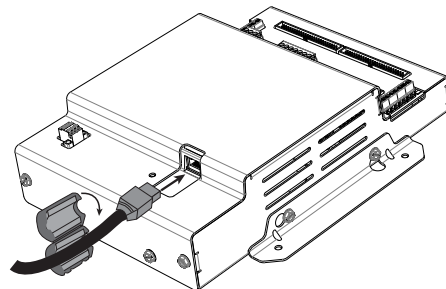

Note: 100 to 277 Vac must be added to control power inputs to supply power to the gateway during configuration.



Wiring (cont.)

7. Once configured, disconnect the local PC. If desired (and the device is configured for operation on the network), connect the E30E directly to the network for ongoing access to the GUI even if primarily using a serial protocol to access and control the E30E. Note: 100 to 277 Vac must be added to control power inputs to supply power to the gateway during configuration.

Gateway Configuration



DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- This product must be installed inside a suitable fire and electrical enclosure.
- Follow safe electrical work practices. See NFPA 70E in the USA, or applicable local codes.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Do not use this product for life or safety applications.
- Do not install this product in hazardous or classified locations.
- Read, understand and follow the instructions before installing this product.
- Turn off all power supplying equipment before working on or inside the equipment.
- Product may use multiple voltage/power sources. Disconnect ALL sources before servicing.
- Use a properly rated voltage sensing device to confirm that power is off. DO NOT depend on this product for voltage indication.
- Current transformer secondaries (current mode) must be shorted or connected to a burden at all times.
- Products rated only for basic insulation must be installed on insulated conductors.
- Replace all doors, covers and protective devices before powering the equipment.
- The installer is responsible for conformance to all applicable codes.

Failure to follow these instructions will result in death or serious injury.


A qualified person is one who has skills and knowledge related to the construction and operation of this electrical equipment and installations, and has received safety training to recognize and avoid the hazards involved. NEC Article 100

If this product is used in a manner not specified by the manufacturer, the protection provided by the product may be impaired. No responsibility is assumed by the manufacturer for any consequences arising out of the use of this material.

Accessing the Graphical User Interface (GUI)

If the E30E IP address parameters are already configured to work on the network and is being accessed from a PC on that same network, open a web browser and enter the IP address of the E30E into the address/URL field on the browser. Press Enter. The GUI launches and appears, as shown, in the browser window. Note: the screen captures provided in this example were taken using Windows 7; other operating systems will look different.

Gateway Configuration (cont.)

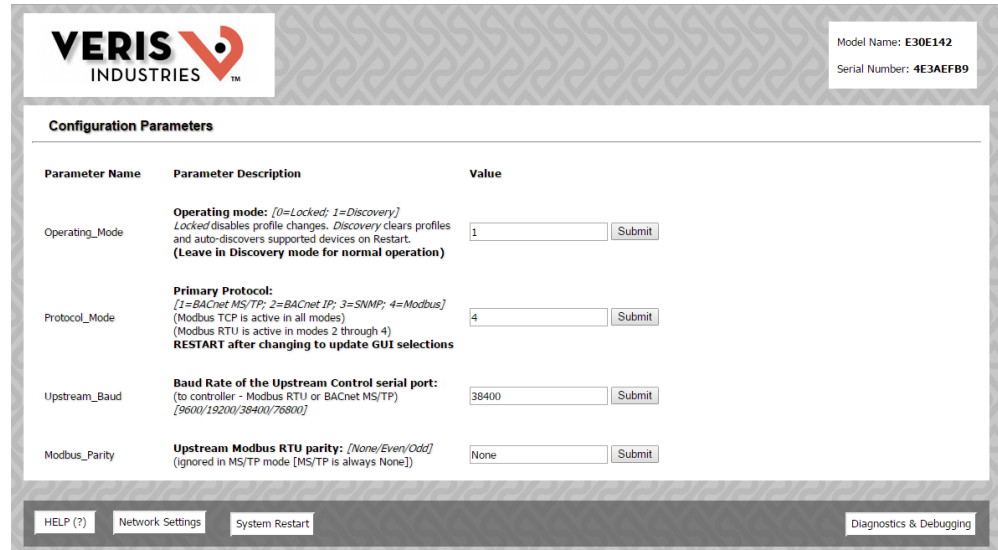


Configuration Parameters

Parameter Name	Parameter Description	Value
Operating_Mode	Operating mode: [0=Locked; 1=Discovery] Locked disables profile changes. Discovery clears profiles and auto-discovers supported devices on Restart. (Leave in Discovery mode for normal operation)	1 <input type="button" value="Submit"/>
Protocol_Mode	Primary Protocol: [1=BACnet MS/TP; 2=BACnet IP; 3=SNMP; 4=Modbus] (Modbus TCP is active in all modes) (Modbus RTU is active in modes 2 through 4) RESTART after changing to update GUI selections	4 <input type="button" value="Submit"/>
Upstream_Baud	Baud Rate of the Upstream Control serial port: (to controller - Modbus RTU or BACnet MS/TP) [9600/19200/38400/76800]	38400 <input type="button" value="Submit"/>
Modbus_Parity	Upstream Modbus RTU parity: [None/Even/Odd] (ignored in MS/TP mode [MS/TP is always None])	None <input type="button" value="Submit"/>

If the E30E IP address parameters are not configured for the network you can either use a PC-based tool called the Veris Toolbox, which can be downloaded from the Veris website at www.veris.com (see the section “Using the Veris Toolbox to Set Up the IP Address for Use on Your Network”) or, connect a PC directly and access the GUI as described in the section “Using the GUI to Set Up the IP Address for Use on Your Network”.


Using the Veris Toolbox to Set Up the IP Address for Use on Your Network

1. Download the Veris Toolbox software onto a PC from www.Veris.com/BACnet.
2. Extract the software from the zip file.
3. Run the Setup.exe file and follow the installation instructions.
4. Either connect the E31E Ethernet interface to the same network subnet as your PC or connect a cable between them directly. You will not need to change any network settings on the PC for the Toolbox software to find the E31E.
5. Apply power to the E31E.
6. Launch the Veris Toolbox software. It will discover the E31E, regardless of its IP settings.

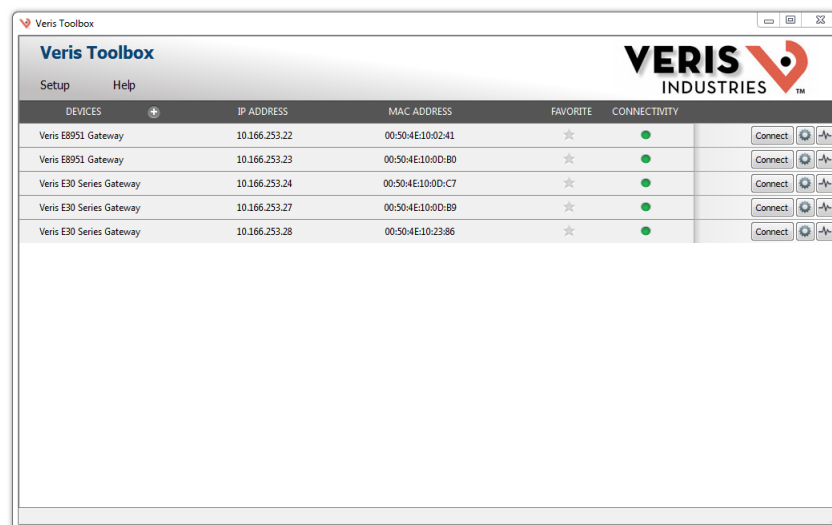


Gateway Configuration (cont.)


- Click the gear-shaped configuration icon near the right edge of the window on the line that shows the device you wish to configure. The Configure Device dialog will appear.

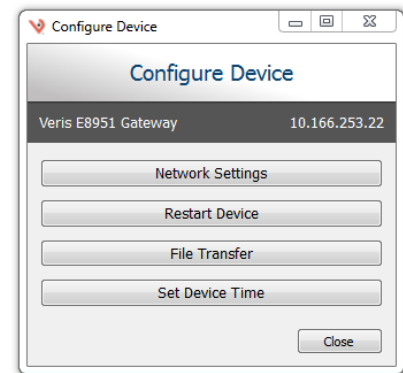

- Click the Network Settings button. The Device Network Settings dialog will appear. This dialog shows all the current IP settings of the E31E.

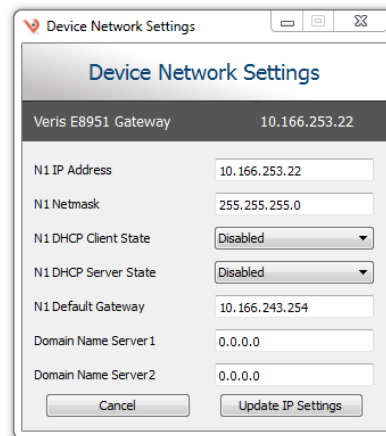

- Enter the network settings needed to operate properly on your network.
- Click the Update IP Settings button. The Change IP Settings confirmation dialog will appear.

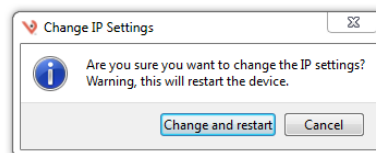

Confirm that the settings you entered are correct and click the Change and Restart button. The E31E will reset and power up with the new settings. If you watch the Veris Toolbox screen, the entry for the old address will soon show a lost connection. Eventually a new entry with the new IP address will appear and the old entry will be deleted.


- Disconnect the E31E and connect it to the network on which it will be used.

Using the GUI to Set Up the IP Address for Use on Your Network


If the E30E IP address parameters are not configured for the network, connect a PC directly and access the GUI from it as follows:

- Connect a standard Ethernet cable between a PC and the E30E if they are not already connected. Secure a ferrite filter (included) around the Ethernet cable to ensure the device meets emission requirements.


Gateway Configuration (cont.)

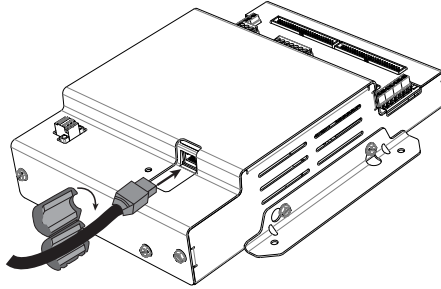


2. Temporarily change the IP address of the PC to a static value on the same subnet as the E30E. For example: If the E30E is set to its factory default IP address of 192.168.1.24, set the PC to an unused static IP address on the 192.168.1.xxx subnet (where xxx is any value between 1 and 255, except 24). Set the subnet mask to 255.255.255.0.

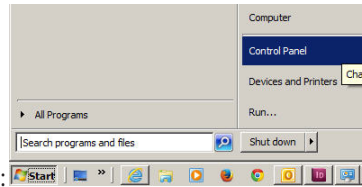

- a. Open the Control Panel:
- b. In the Control Panel, select Network and Sharing Center. In the Sharing Center, select Change Adapter Settings in the list at the upper left corner.
- c. Select the connection for the network to which the E30E is connected.

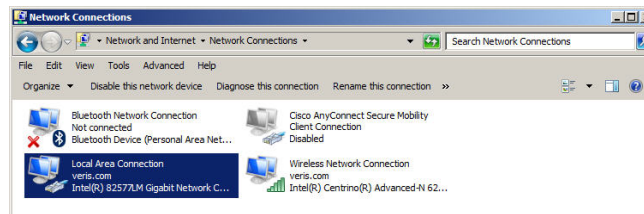


When the Local Area Connection Status dialog box appears, click Properties.

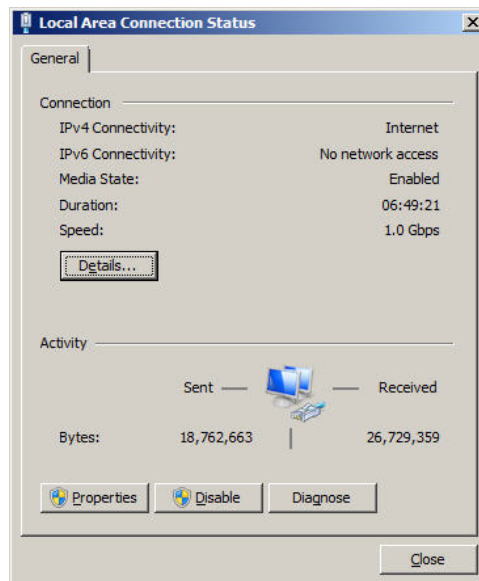


Gateway Configuration (cont.)

d. Highlight Internet Protocol Version 4 (TCP/IPv4), and click OK.

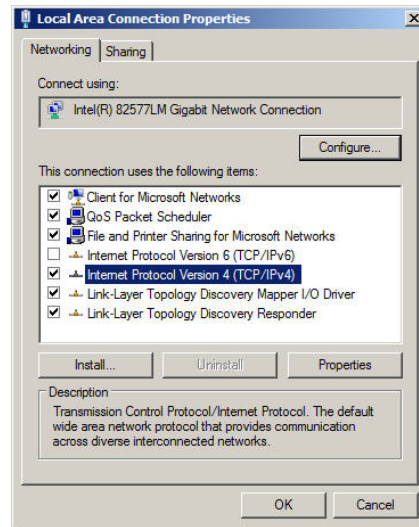

e. Select <Use the following IP Address>. Make note of the IP address that appears, then enter the static IP address (e.g. if the E30E Series is still set to its default address of 192.168.1.24, then change it to 192.168.1.100). Enter 255.255.255.0 for the subnet mask. Click OK.

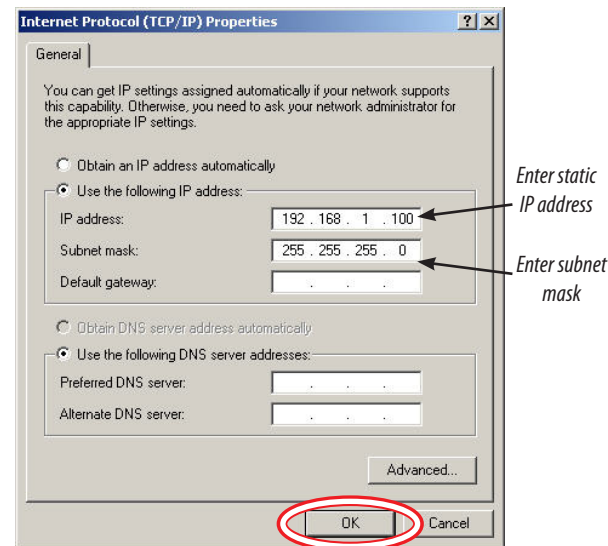


e. Click OK.

3. Open a PC web browser and enter the IP address of the E30E (default address is 192.168.1.24) to access the GUI. The GUI launches and appears in the browser window.
4. When finished using the GUI, unplug the Ethernet cable from the PC and restore the IP settings as needed.

Using the GUI to set up the IP address for use on your network

1. Access the GUI according to the instructions in the "Accessing the Graphical User Interface (GUI)" section. To set IP address parameters, click the button labeled "Network Settings."

Gateway Configuration (cont.)

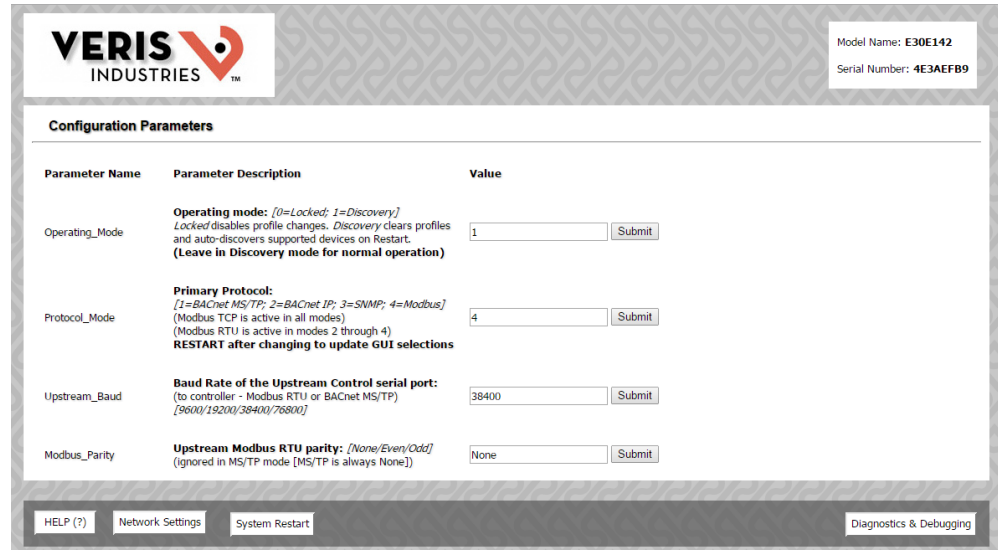


Parameter Name	Parameter Description	Value
Operating_Mode	Operating mode: [0=Locked; 1=Discovery] Locked disables profile changes. Discovery clears profiles and auto-discovers supported devices on Restart. (Leave in Discovery mode for normal operation)	1 <input type="button" value="Submit"/>
Protocol_Mode	Primary Protocol: [1=BACnet MS/TP; 2=BACnet IP; 3=SNMP; 4=Modbus] (Modbus TCP is active in all modes) (Modbus RTU is active in modes 2 through 4) RESTART after changing to update GUI selections	4 <input type="button" value="Submit"/>
Upstream_Baud	Baud Rate of the Upstream Control serial port: (to controller - Modbus RTU or BACnet MS/TP) [9600/19200/38400/76800]	38400 <input type="button" value="Submit"/>
Modbus_Parity	Upstream Modbus RTU parity: [None/Even/Odd] (ignored in MS/TP mode [MS/TP is always None])	None <input type="button" value="Submit"/>

HELP (?) Network Settings System Restart Diagnostics & Debugging

The Network Settings overlay appears.

Have the desired IP settings ready in advance (contact the system administrator). IP parameters for use with BACnet IP are static, not dynamic.

- Set the IP address for use on the BACnet/IP network:

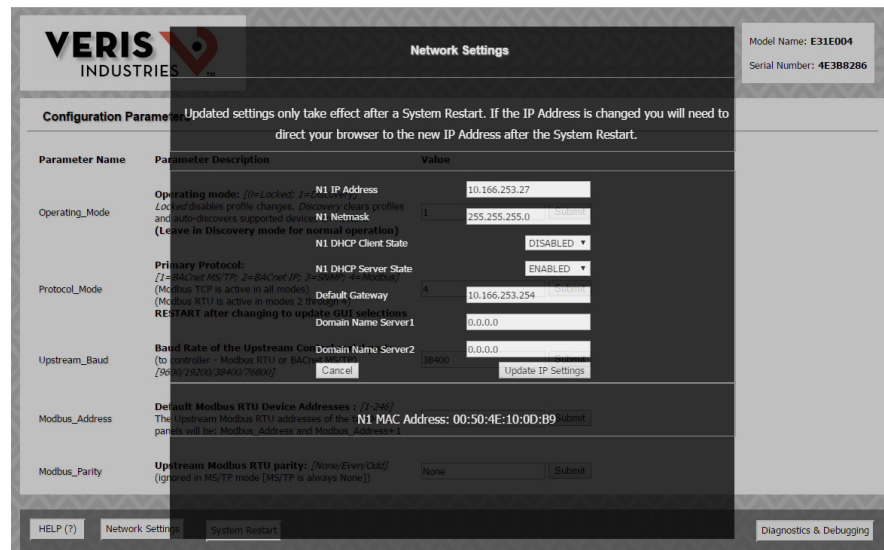

Parameter Name	Parameter Description	Value
Operating_Mode	Operating mode: [0=Locked; 1=Discovery] Locked disables profile changes. Discovery clears profiles and auto-discovers supported devices on Restart. (Leave in Discovery mode for normal operation)	1 <input type="button" value="Submit"/>
Protocol_Mode	Primary Protocol: [1=BACnet MS/TP; 2=BACnet IP; 3=SNMP; 4=Modbus] (Modbus TCP is active in all modes) (Modbus RTU is active in modes 2 through 4) RESTART after changing to update GUI selections	4 <input type="button" value="Submit"/>
Upstream_Baud	Baud Rate of the Upstream Control serial port: (to controller - Modbus RTU or BACnet MS/TP) [9600/19200/38400/76800]	38400 <input type="button" value="Submit"/>
Modbus_Address	Default Modbus RTU Device Addresses: [1-240] The Upstream Modbus RTU addresses of the panels will be: Modbus_Address and Modbus_Address+1	N1 MAC Address: 00:50:4E:10:0D:B9 <input type="button" value="Submit"/>
Modbus_Parity	Upstream Modbus RTU parity: [None/Even/Odd] (ignored in MS/TP mode [MS/TP is always None])	None <input type="button" value="Submit"/>


HELP (?) Network Settings System Restart Diagnostics & Debugging

- Enter the desired IP address in the N1_IP_Address field (in the format xxx.xxx.xxx.xxx)
- If necessary, change the Subnet Mask by entering the appropriate new value in the N1_Netmask field
- If the E30E is connected to an Ethernet gateway, enter its IP address in the Default Gateway field. This is especially critical if the E30E will be used as a BACnet BBMD device.
- Click the Update IP settings button. The E30E changes its settings.
- Click the System Restart button and wait for the E30E to fully initialize. The GUI will connect when the E30E is installed on a network that matches the settings and the new IP address is entered into a web browser on a PC properly configured for the network.

Gateway Configuration (cont.)

Using the GUI to Set the Configuration Parameters for the Communication Protocols

Access the GUI according the instructions in the “Accessing the Graphical User Interface (GUI)” section.

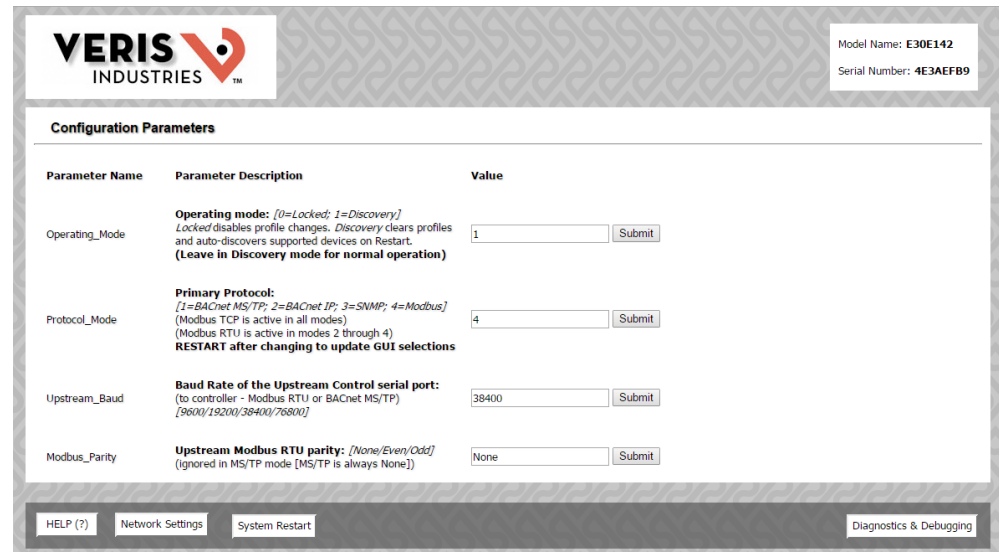

VERIS INDUSTRIES

Model Name: **E30E142**
Serial Number: **4E3AEFB9**

Configuration Parameters

Parameter Name	Parameter Description	Value
Operating_Mode	Operating mode: [0=Locked; 1=Discovery] Locked/disables profile changes. Discovery clears profiles and auto-discovers supported devices on Restart. (Leave in Discovery mode for normal operation)	1 <input type="button" value="Submit"/>
Protocol_Mode	Primary Protocol: [1=BACnet MS/TP; 2=BACnet IP; 3=SNMP; 4=Modbus] (Modbus TCP is active in all modes) (Modbus RTU is active in modes 2 through 4) RESTART after changing to update GUI selections	4 <input type="button" value="Submit"/>
Upstream_Baud	Baud Rate of the Upstream Control serial port: (to controller - Modbus RTU or BACnet MS/TP) [9600/19200/38400/76800]	38400 <input type="button" value="Submit"/>
Modbus_Parity	Upstream Modbus RTU parity: [None/Even/Odd] (ignored in MS/TP mode [MS/TP is always None])	None <input type="button" value="Submit"/>

HELP (?) Network Settings System Restart Diagnostics & Debugging

The home screen on the GUI provides fields for configuration of the E30E. The E30E has four primary modes of operation, each of which support a different combination of protocols. Each option field has a Submit button to the right. When changing the value in any field, click Submit to store the new value. The GUI prompts the user to restart the system. If multiple values are changed, it is easiest to submit all changes and restart only once when finished with the whole screen. To restart, click the System Restart button in the row at the bottom of the screen. The restart takes several seconds, during which the server may lose its connection. Messages appear at the top of the screen indicating current status, but do not perform any actions. Simply allow the tool to complete the restart cycle.

The first selection in the GUI is Operating_Mode, which has two choices:

1. Locked: used for all normal product operation. It is provided as a tool for high-level technical support. The gateway retains its current profile configuration when powered.
2. Discovery mode (default): deletes profiles and rediscovers them when the device is powered again. The results are the same, unless the profile configuration is intentionally altered. Profile selection and discovery are especially important when using BACnet or SNMP protocols. For normal operation, always use discovery mode.

The second selection in the GUI is Protocol_Mode, used to select the combination of protocols the product communicates with. The E30E supports five protocols, some of which can operate simultaneously. The table below shows which protocols are supported in each mode.

Protocol Mode	Primary Protocol	Ethernet Protocol	RS-485 Protocol
1	BACnet MS/TP	Modbus TCP	BACnet MS/TP
2	BACnet IP	BACnet IP/Modbus TCP	Modbus RTU
3	SNMP	SNMP/Modbus TCP	Modbus RTU
4	Modbus	Modbus TCP	Modbus RTU

To select a primary protocol mode, enter the corresponding number into the text field adjacent to the Primary Protocol option and click the Submit button to the right of the text field. A prompt appears at the top of the screen instructing the user to restart the system. When finished, the screen refreshes itself with the appropriate fields for the selected mode.

The next GUI selection, in any protocol mode, is the Upstream_Baud rate selection. If you have selected BACnet MS/TP (mode 1) as the primary protocol mode, this value sets the MS/TP baud rate. If you have selected modes 2 or 3 as the primary protocol mode, you may not be using the RS-485 interface at all. If so, this setting can be ignored.


Gateway Configuration (cont.)

If you have selected BACnet IP, SNMP or Modbus mode, the next selection is Modbus_Address, which sets the Modbus address(es) for the E30E when access with Modbus RTU with the RS-485 serial connection.

The next selection (in BACnet IP, SNMP or Modbus modes) is Modbus_Parity, which sets the parity of the upstream serial connection. If using Modbus RTU protocol, set this to match your Modbus master. If not, ignore this field.

The following sections show the field selections (with factory default values) specific to each of the four Protocol_Modes.

1. BACnet MS/TP mode

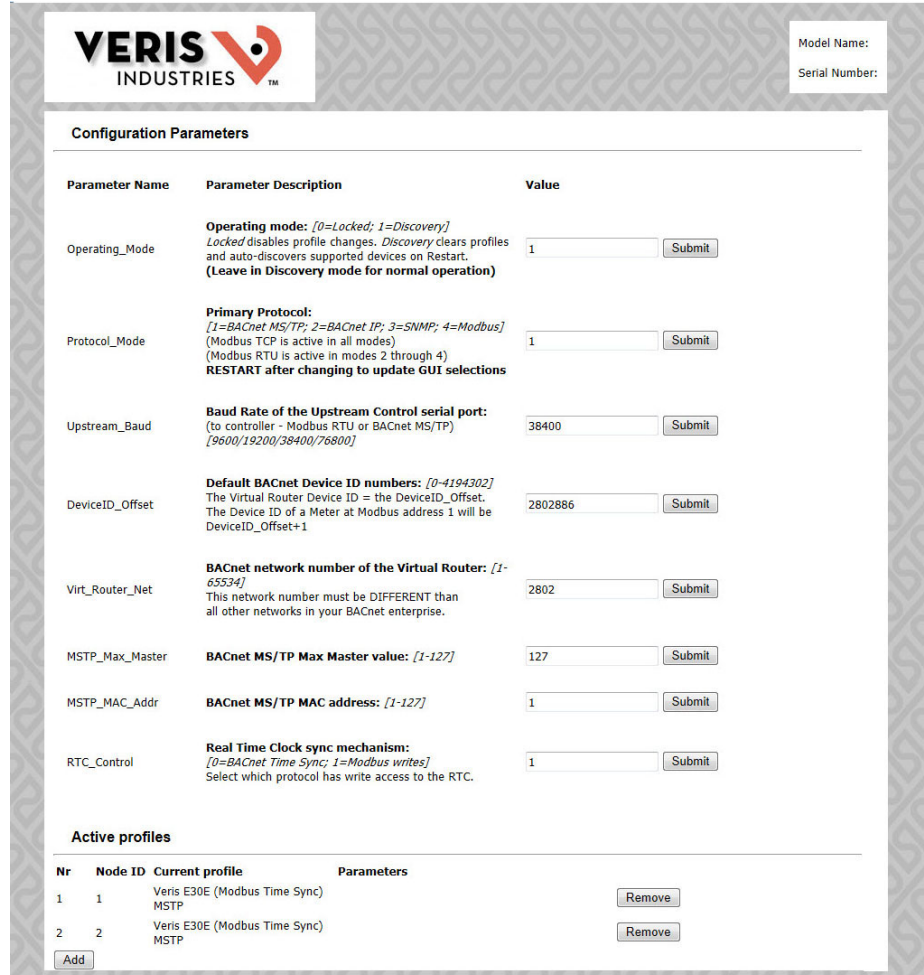

The screenshot shows the 'Configuration Parameters' section of the Veris Industries gateway configuration interface. It includes a table of parameters with their descriptions and current values, each with a 'Submit' button. Below the table is an 'Active profiles' section showing a list of profiles with 'Add' and 'Remove' buttons.

Parameter Name	Parameter Description	Value
Operating_Mode	Operating mode: [0=Locked; 1=Discovery] Locked disables profile changes. Discovery clears profiles and auto-discovers supported devices on Restart. (Leave in Discovery mode for normal operation)	1 <input type="button" value="Submit"/>
Protocol_Mode	Primary Protocol: [1=BACnet MS/TP; 2=BACnet IP; 3=SNMP; 4=Modbus] (Modbus TCP is active in all modes) (Modbus RTU is active in modes 2 through 4) RESTART after changing to update GUI selections	1 <input type="button" value="Submit"/>
Upstream_Baud	Baud Rate of the Upstream Control serial port: (to controller - Modbus RTU or BACnet MS/TP) [9600/19200/38400/76800]	38400 <input type="button" value="Submit"/>
DeviceID_Offset	Default BACnet Device ID numbers: [0-4194302] The Virtual Router Device ID = the DeviceID_Offset. The Device ID of a Meter at Modbus address 1 will be DeviceID_Offset+1	2802886 <input type="button" value="Submit"/>
Virt_Router_Net	BACnet network number of the Virtual Router: [1-65534] This network number must be DIFFERENT than all other networks in your BACnet enterprise.	2802 <input type="button" value="Submit"/>
MSTP_Max_Master	BACnet MS/TP Max Master value: [1-127]	127 <input type="button" value="Submit"/>
MSTP_MAC_Addr	BACnet MS/TP MAC address: [1-127]	1 <input type="button" value="Submit"/>
RTC_Control	Real Time Clock sync mechanism: [0=BACnet Time Sync; 1=Modbus writes] Select which protocol has write access to the RTC.	1 <input type="button" value="Submit"/>

Active profiles			
Nr	Node ID	Current profile	Parameters
1	1	Veris E30E (Modbus Time Sync) MSTP	<input type="button" value="Remove"/>
2	2	Veris E30E (Modbus Time Sync) MSTP	<input type="button" value="Remove"/>

The first three options are discussed previously.

The DeviceID_Offset parameter is used to assign Device_IDs on power-up or on restart until they have been overwritten via BACnet. Enter your desired value here and click Submit. The new value is first used at the next power-up or system restart. Valid Device_ID numbers range from 1 to 4194303. Since the numbers assigned during discovery are the sum of the Offset and the Modbus address (which can be any value from 1 to 247), the Offset values entered in the GUI must be no larger than 4194057.

The E30E gateway creates a BACnet virtual router and separate BACnet devices for each 42-channel meter panel behind this virtual router, allowing the devices to be discoverable and independently accessed via BACnet, even if the virtual router is connected by MS/TP, using a single MAC address. To use this product with MS/TP, the BACnet system must support the discovery and use of a BACnet router on the MS/TP trunk and any devices beyond it. This virtual router creates an exclusive BACnet network on which the meter's BACnet devices reside. This network must have a BACnet network number that is different from any other networks in the entire BACnet enterprise. When multiple E30E products are added anywhere in the enterprise, each one must have a unique network number. Failure to set an exclusive value in this field causes communication conflicts in the BACnet system.

Gateway Configuration (cont.)


Enter a non-conflicting value here and click submit. Valid network numbers range from 1 to 65534; if other values are entered, the network number defaults to 5. The new value is first used at the next power-up or system restart. If using an external BACnet router to connect the E30E as an MS/TP device, it is recommended that the router also be restarted after the E30E has completed discovery, when the network number is changed.

The next field for the BACnet MS/TP protocol mode is the MSTP_Max_Master, which allows this value to be set prior to using BACnet software to access the E30E. The default value of 127 works regardless of the addresses the MS/TP network uses, but selecting a lower value may optimize the network. Do not set this value lower than the highest address on the network. To set this value via BACnet, write to the Max_Master property of the device object for the E30E's virtual router.

The next field for the BACnet MS/TP protocol mode is the MSTP_MAC_Addr, which sets the MAC address for the virtual router. The E30E panel(s) are devices on the internal BACnet network and are not directly addressable as MAC addresses on the MS/TP network.

The final field for the BACnet MS/TP mode is RTC_Control, which selects which protocol (BACnet or Modbus) has write access to the RTC. If 0 (BACnet) is selected, the RTC is set using the BACnet Time Synchronization service. If 1 (Modbus) is selected, the RTC is set by writing to the appropriate Modbus registers.

2. BACnet IP mode



Model Name:
Serial Number:

Configuration Parameters

Parameter Name	Parameter Description	Value
Operating_Mode	Operating mode: [0=Locked; 1=Discovery] <i>Locked</i> disables profile changes. <i>Discovery</i> clears profiles and auto-discovers supported devices on Restart. (Leave in Discovery mode for normal operation)	1 <input type="button" value="Submit"/>
Protocol_Mode	Primary Protocol: [1=BACnet MS/TP; 2=BACnet IP; 3=SNMP; 4=Modbus] (Modbus TCP is active in all modes) (Modbus RTU is active in modes 2 through 4) RESTART after changing to update GUI selections	2 <input type="button" value="Submit"/>
Upstream_Baud	Baud Rate of the Upstream Control serial port: (to controller - Modbus RTU or BACnet MS/TP) [9600/19200/38400/76800]	38400 <input type="button" value="Submit"/>
Modbus_Address	Default Modbus RTU Device Addresses: [1-246] The Upstream Modbus RTU addresses of the two Meter panels will be: Modbus_Address and Modbus_Address+1	1 <input type="button" value="Submit"/>
Modbus_Parity	Upstream Modbus RTU parity: [None/Even/Odd] (ignored in MS/TP mode [MS/TP is always None])	None <input type="button" value="Submit"/>
DeviceID_Offset	Default BACnet Device ID numbers: [0-4194302] The Virtual Router Device ID = the DeviceID_Offset. The Device ID of a Meter at Modbus address 1 will be DeviceID_Offset+1	10000 <input type="button" value="Submit"/>
DeviceID_Offset	Default BACnet Device ID numbers: [0-4194302] The Virtual Router Device ID = the DeviceID_Offset. The Device ID of a Meter at Modbus address 1 will be DeviceID_Offset+1	10000 <input type="button" value="Submit"/>
Virt_Router_Net	BACnet network number of the Virtual Router: [1-65534] This network number must be DIFFERENT than all other networks in your BACnet enterprise.	100 <input type="button" value="Submit"/>
BACnet_IP_Port	BACnet IP port: Default is 47808 (0xBAC0). enter in decimal [1-65535]	47808 <input type="button" value="Submit"/>
BBMD_Enable	Enable BBMD support: [Enter <i>BBMD</i> to enable or - (<i>hyphen</i>) to disable] Specify other BBMD devices in a bdt.ini file and transfer to unit via Diagnostics & Debugging	- <input type="button" value="Submit"/>
RTC_Control	Real Time Clock sync mechanism: [0=BACnet Time Sync; 1=Modbus writes] Select which protocol has write access to the RTC.	1 <input type="button" value="Submit"/>

Active profiles

Nr	Node ID	Current profile	Parameters	
1	1	Veris E30E (Modbus Time Sync)	IP	<input type="button" value="Remove"/>
2	2	Veris E30E (Modbus Time Sync)	IP	<input type="button" value="Remove"/>

Gateway Configuration (cont.)

BACnet IP mode uses the same DeviceID_Offset, Virt_Router_Net and RTC_Control parameters described above for BACnet MS/TP mode. One additional parameter, BACnet_IP_Port, is used to set the UDP port. Most BACnet systems use the default port (47808 decimal, 0xBAC0 hex) that is recommended in the BACnet standard as the only UDP port. Some large systems need to segment the enterprise and use more than port. If so, enter the number of the port you need to use to access this device. BACnet IP mode does not use MSTP_Max_Master or MSTP_MAC_Addr.

BACnet IP mode adds another field called BBMD_Enable. See the section BBMD Support for a full description of how to enable and use BBMD support.

3. SNMP mode



The screenshot shows the Veris Industries Gateway Configuration GUI. At the top left is the Veris Industries logo. At the top right are fields for 'Model Name:' and 'Serial Number:'. The main section is titled 'Configuration Parameters' and contains a table with the following parameters:

Parameter Name	Parameter Description	Value
Operating_Mode	Operating mode: [0=Locked; 1=Discovery] Locked disables profile changes. Discovery clears profiles and auto-discovers supported devices on Restart. (Leave in Discovery mode for normal operation)	1 <input type="button" value="Submit"/>
Protocol_Mode	Primary Protocol: [1=BACnet MS/TP; 2=BACnet IP; 3=SNMP; 4=Modbus] (Modbus TCP is active in all modes) (Modbus RTU is active in modes 2 through 4) RESTART after changing to update GUI selections	3 <input type="button" value="Submit"/>
Upstream_Baud	Baud Rate of the Upstream Control serial port: (to controller - Modbus RTU or BACnet MS/TP) [9600/19200/38400/76800]	38400 <input type="button" value="Submit"/>
Modbus_Address	Default Modbus RTU Device Addresses : [1-246] The Upstream Modbus RTU addresses of the two Meter panels will be: Modbus_Address and Modbus_Address+1	1 <input type="button" value="Submit"/>
Modbus_Parity	Upstream Modbus RTU parity: [None/Even/Odd] (Ignored in MS/TP mode [MS/TP is always None])	None <input type="button" value="Submit"/>
Read_Community	SNMP Read Community string: [character string]	public <input type="button" value="Submit"/>
Write_Community	SNMP Write Community string: [character string]	private <input type="button" value="Submit"/>
Trap_Community	SNMP Notification Trap Community string: [character string]	trap <input type="button" value="Submit"/>
SNMP_Notif_IP	Address of the SNMP Notification client: [xxx.xxx.xxx.xxx]	192.168.1.67 <input type="button" value="Submit"/>

Below the configuration parameters is a section titled 'Active profiles' which contains a table with columns: Nr, Node ID, Current profile, and Parameters. There is an 'Add' button below the table.

SNMP mode uses four unique parameters. The SNMP_Community strings are used to control access to the device. Whatever values are entered here must also be used in the MIB browser or SNMP access software to communicate with this device. The Read_Community string is used to enable reading data. The Write_Community string is used to enable writing data. The Trap_Community string is used to enable the receipt of event notifications.

The last parameter, SNMP_Notif_IP is used to set the IP address of the client that will be used to receive SNMP event notifications, such as alarms.

Operating the E30E

Restart the E30E by using the button at the bottom of the GUI or by cycling the power. It takes about 30 seconds to initialize completely and be ready for external communication.

Gateway Configuration (cont.)

BACnet Network Management – Important Steps to Avoid Conflicts

BACnet configuration uses two default settings that might need to be changed, depending on the application.

- a. **Virtual router network ID number.** Every logical network segment (IP subnet, MS/TP trunk, etc.) in an entire system must have a (16-bit) network ID number that is unique from all other BACnet networks in the enterprise. The BACnet network administrator assigns this network ID so that no two ID numbers conflict (whether using BACnet/IP or MS/TP). Within each segment, every device is physically identified by the combination of its 8-bit MAC address and the 16-bit network ID number. To support multiple meter panels (panel 1 and panel 2 are separate) with a single gateway, the E30E creates a virtual BACnet router that presents multiple BACnet devices using a single (its own) MS/TP MAC address. Each E30E must have its own (internal) network ID, and it creates a device object for itself and one for each Modbus address discovered.

The factory default network address is 50 (decimal). If that number is already in use in the system, assign a unique address using the graphical user interface (GUI) on the built-in web server (this requires an Ethernet connection to a web browser; see BACnet/IP Setup section for instructions on changing configuration settings using the GUI). Valid network numbers range from 1 to 65534; if other values are entered, the network number defaults to 5.

- b. **Device_ID Offset.** Every BACnet device must have a BACnet Device_ID number that is unique throughout the entire enterprise. Since the E30E presents every Modbus meter as a BACnet device, each connected meter that has a Modbus address must have a BACnet Device_ID.

By default, each device discovered receives a Device_ID number that is the sum of an offset value (default is 50000) and the Modbus address of the device. If these Device_ID numbers cause a conflict with existing devices in the system, or if the system includes multiple E30E Series, change the Device_ID numbers before connecting the E30E to the system. This can be managed one of two ways:

- i. Connect to the E30E directly (offline from the system) with the devices (meters). After the E30E discovers the devices and assigns their default ID numbers, the user can choose new Device_ID values and write these to each device using BACnet software. Subsequent discoveries will not overwrite these values with defaults even if the E30E is then set to Discovery mode.
- ii. Use the GUI on the built-in web server to modify the offset value used to calculate default Device_IDs in the discovery process (this requires an Ethernet connection to a web browser; see BACnet/IP Setup section for instructions on changing configuration settings using the GUI). The E30E retains this offset value and uses it to assign Device_ID numbers every time power is cycled if the E30E is in Discovery mode. Valid Device_ID numbers range from 1 to 4194303. Since the numbers assigned during discovery are the sum of the Offset and the Modbus address (which can be any value from 1 to 247), any Offset values entered in the GUI must be less than 4194057.

BACnet PICS

BACnet PICS (Protocol Implementation Conformance Statement)

Vendor Name: Veris Industries
 BACnet Vendor ID 133
 Product Name: E30E Series Branch Circuit Monitor
 Product Model Number: <Model Number>
 Product Description: Branch Circuit Monitor
 BACnet Protocol Version: Version 1 Revision 12

BACnet Standardized Device Profile (Annex L) – [Note: E30E incorporates a gateway device]

- BACnet Application Specific Controller (B-ASC)

BACnet Interoperability Building Blocks Supported (Annex K):

- K.1.2 BIBB - Data Sharing - ReadProperty-B (DS-RP-B)
- K.1.4 BIBB - Data Sharing - ReadPropertyMultiple-B (DS-RPM-B)
- K.1.8 BIBB - Data Sharing - WriteProperty-B (DS-WP-B)
- K.1.10 BIBB - Data Sharing - WritePropertyMultiple-B (DS-WPM-B)
- K.1.12 BIBB - Data Sharing - COV-B (DS-COV-B)
- K.2.2 BIBB - Alarm and Event - Notification Internal-B (AE-N-I-B)
- K.2.5 BIBB - Alarm and Event - ACK-B (AE-ACK-B)
- K.2.11 BIBB - Alarm and Event - Information-B (AE-INFO-B)
- K.5.2 BIBB - Device Management - Dynamic Device Binding-B (DM-DDB-B)
- K.5.4 BIBB - Device Management - Dynamic Object Binding-B (DM-DOB-B)
- K.5.6 BIBB - Device Management - DeviceCommunicationControl-B (DM-DCC-B)
- K.5.12 BIBB - Device Management - TimeSynchronization-B (DM-TS-B)
- K.5.22 BIBB - Device Management - List Manipulation-B (DM-LM-B)

Standard Object Types Supported

- Device Object
- Analog Input
- Analog Output
- Analog Value

Unsupported Properties and Restrictions

- Does not support BACnet CreateObject
- Does not support BACnet DeleteObject
- Does not support any proprietary properties
- No proprietary properties exist
- No range restrictions exist
- Max_Master is writable

Data Link Layer Options:

- BACnet IP, (Annex J)
- MS/TP master (Clause 9), baud rate up to 76.8 kbps

Networking Options:

- BACnet/IP Broadcast Management Device (BBMD)
- Registrations by Foreign Devices

Character Sets Supported:

- ISO 10646 (UTF-8) / ANSI X3.4

General BACnet Programming Information

The E30E consists of a BACnet virtual router and one or two 42-channel branch circuit meters. The BACnet virtual router has its own device object and an internal BACnet network. The branch circuit monitors have their own device objects that are logical devices on the network internal to (beneath) the virtual router. It is critical that the network number of the virtual router's internal network be different than any other network number in your entire BACnet system. The network number is set to 50 at the factory, but can be changed in the GUI or by writing to the Present_Value of the AV2 data object associated with that device. Changes to the network number do not take effect until the E30E is re-started, either from the GUI or by cycling the power.

The default Device ID of the virtual router is the Device_Offset parameter, which is set to 5000 at the factory, but can be changed in the GUI or by writing to Present_Value of the AV1 data object associated with that device. Changes to the network number do not take effect until the E30E is re-started, either from the GUI or by cycling the power. The default Device IDs are numbered to consecutively follow the Device ID of the virtual router (e.g. if the Device_Offset parameter is 50000, the virtual router has a Device_ID of 50000, the branch circuit monitor called Panel 1 has a Device_ID of 50001 and the branch circuit monitor called Panel 2 (if present) has a Device_ID of 50002.

All Device_IDs are writable. Once a device's Object_Identifier is overwritten, changes to the ID Offset no longer affect that Object_Identifier, even in Discovery mode. Make further changes to the value by writing the Object_Identifier property.

The default Object_Name property value of each device object is an abbreviated name of the meter series discovered with an underscore and the Modbus address of the meter appended to it. The Object_Name is a writable property. Once a device's Object_Name is overwritten, the Object_Name does not revert to the initial default, even in Discovery mode. Make further changes to the value by writing the Object_name property.

The E30E supports Subscribe_COV, with default COV increment values assigned as shown in the data object tables. If these values are not appropriate for a specific application, write them as needed when they are subscribed. On subsequent power cycles, no subscriptions are active and the COV increments return to their default values.

With few exceptions, any data values written to AV objects are accepted (without error) by the data object and passed through to the corresponding Modbus register. There is no direct indication via the BACnet protocol if invalid values are rejected. After an invalid value is written to the Present_Value of an AV, subsequent reads of that property return the new (invalid) value until the next time the E30E refreshes its data (this may take several seconds).

BBMD Support

When the E30E is in BACnet IP mode, it can be configured as a BACnet Broadcast Management Device (BBMD) by entering "BBMD" in the Enable BBMD Support field in the GUI, adding devices to a comma separated value text file named bdt.ini, and loading it onto the device. The example below shows the syntax required for the bdt.ini file. All lines beginning with two forward slashes are interpreted as comments. Use exactly one line per device added, separated by commas (no spaces). The file must include an entry (line) for each BBMD device in the BACnet enterprise, including the E30E itself. Note: the default gateway address in the network setup must be correct for BBMD support to operate correctly. Once edited, upload the bdt.ini file to the gateway through the GUI. Click the <Diagnostics and Debugging> button in the lower right corner of the GUI and follow the folder tree under Navigation to the following folder: "Veris E3x Series Gateway/Setup/File Transfer." Select the "General" tab (this is important - using the wrong tab can overwrite critical files). Click the <Browse> button and select your bdt.ini file. Then click <Submit>. The GUI quickly indicates "The file was updated successfully." Click the <System Restart> button, click <OK> on the confirmation dialog and wait for the gateway to reinitialize (takes about 30 seconds). BBMD changes are made by uploading a new bdt.ini file. After setting the GUI to enable BBMD support and transferring a new or revised bdt.ini file, restart the E30E to load the file. BBMD support can be disabled in the GUI by entering "-" (a hyphen) in the Enable BBMD Support field in the GUI.

```
// Bdt.ini
// The format of this table must be (without the forward slashes - they are comment indicators):
//
//BBMD IP_Address , BBMD port , BBMD subnet Mask
//
147.26.116.217,47808,255.255.255.255
172.16.17.198,47808,255.255.255.255
```

General SNMP Programming Information

The E30E can be configured to support the SNMP V2c protocol over Ethernet. The SNMP community string and the IP address for the client receiving SNMP V2c event notifications can be set via the GUI. MIB files are available for download at www.veris.com/SNMP.aspx to enable accessing the E30E from an MIB browser.

The E30E OID structure organizes the data under two “panels” representing the two breaker panels that can be monitored by a fully populated E30E. Panel 1 corresponds to the branch current sensor strips connected to the “Panel 1A” and “Panel 1B” connectors and to the data set under Modbus address 1 or BACnet device identified as Node_1 in the GUI. Panel 2 corresponds to the branch current sensor strips connected to the “Panel 2A” and “Panel 2B” connectors and to the data set under Modbus address 2 or BACnet device identified as Node_2 in the GUI.

For each panel, data is arranged under six tree branches.

- The Configuration branch contains all writable configuration parameters.
- The Alarms branch contains all the alarm notification traps, the global alarm status registers and counters and tables of the alarm status indicators.
- The Voltage Inputs branch contains all data measurements pertaining to the voltage inputs.
- The Auxiliary Inputs branch contains all data measurements pertaining to the aux inputs other than voltage-related.
- The Branch Inputs branch contains all data measurements to the branch inputs in table format.
- The Flex Circuits branch contains all data measurements to the logical meter summaries in table format.

Commissioning

1. Reconnect power to the panel.
2. Configure installation mode using Modbus Register 6.
3. Configure CT scaling.
4. Configure alarms.
5. Configure demand.

Download the free E3x configuration tool from www.veris.com to commission the device for operation.

Recommended Accessories

Part ID	Description
CBL008	Flat ribbon cable, 50 x 28 AWG, 1.5 ft. (0.45 m)
CBL016	Flat ribbon cable, 50 x 28 AWG, 4 ft. (1.2 m)
CBL017	Flat ribbon cable, 50 x 28 AWG, 5 ft. (1.5 m)
CBL018	Flat ribbon cable, 50 x 28 AWG, 6 ft. (1.8 m)
CBL019	Flat ribbon cable, 50 x 28 AWG, 8 ft. (2.4 m)
CBL020	Flat ribbon cable, 50 x 28 AWG, 10 ft. (3.0 m)
CBL021	Flat ribbon cable, 50 x 28 AWG, 20 ft. (6.1 m)
CBL022	Round ribbon cable, 50 x 28 AWG, 4 ft. (1.2 m)
CBL023	Round ribbon cable, 50 x 28 AWG, 10 ft. (3 m)
CBL024	Round ribbon cable, 50 x 28 AWG, 20 ft. (6 m)
CBL025	Flat ribbon cable, 50 x 28 AWG, 2 m
CBL026	Flat ribbon cable, 50 x 28 AWG, 4 m
CBL027	Flat ribbon cable, 50 x 28 AWG, 6 m
CBL031	Round ribbon cable, 50 x 28 AWG, 1.5 ft. (0.45 m)
CBL032	Round ribbon cable, 50 x 28 AWG, 2.5 ft. (0.76 m)
AE001	E3x MCB cover
AE006	E30 CT repair kit

Troubleshooting

Problem	Solution
Product is not communicating over Modbus daisy chain	<ul style="list-style-type: none"> • Check the unit Modbus address to ensure that each device on the daisy chain has a unique address. • Check Parity. • Check the communications wiring. • Check that the daisy chain is properly terminated.
Power factor reading is not as expected	<ul style="list-style-type: none"> • Verify voltage taps are connected in appropriate phase rotation. • Verify strip configuration register matches actual strip installation. • Verify phase rotation of breakers.
Current reading is not as expected, or reading is on different CT number than expected	<ul style="list-style-type: none"> • Verify strip configuration register matches actual strip installation. • Verify ribbon cable is fully seated and in the correct orientation.
Current is reading zero, even when small currents are still flowing through circuit	<ul style="list-style-type: none"> • The product cuts off at 50 mA, and will set the reporting register to 0 mA for currents near or below this range.
E3x Config Tool returns Modbus error on read/write	<ul style="list-style-type: none"> • Verify using the latest release of the NetConfig configuration software tool as older versions may not support all features in current product firmware. Latest version is available on our website http://www.veris.com/modbus.aspx

China RoHS Compliance Information (EFUP Table)

部件名称	产品中有毒有害物质或元素的名称及含量Substances					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电子线路板	X	0	0	0	0	0
0 = 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。 X = 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。						
Z000057-0A						

Appendix: Panel Configuration Diagrams and Selection Matrix

To determine which installation drawing applies and which configuration to select for each logical Panel of the E30E, answer the following questions about your application and look up the corresponding information on the selection table below:


1. Are the rows of circuit breakers in your panelboard vertical (like most North American panels) or horizontal (like many European panels)?
2. Are the breakers arranged in a single row, in two rows, or in two separate panels, each with two rows?
3. If there are two rows of breakers, are the breakers/circuits in each row number sequentially, or are the odd numbers in one row and the even numbers in the other?
4. How many channels (branch CTs) does your E30E have?
5. For vertical dual-row panels with odd/even numbering, do the main feeds come in at the top or the bottom of the chassis?

Orientation of circuit breaker rows:	Breaker Numbering within Panel:	number of E30 channels:	Single Panelboard						Two Panelboards (or Dual-Panel PDU/RPP)		
			Single Panel ≤24 Breakers	Single Panel ≤36 Breakers	Single Panel ≤42 Breakers	Single Panel ≤48 Breakers	Single Panel ≤72 Breakers	Single Panel ≤84 Breakers	Two Panels ≤24 Breakers each	Two Panels ≤36 Breakers each	Two Panels ≤42 Breakers each
			24	36	42	48	72	84	48	72	84
Vertical	Dual Row - Top Feed (with Odd/Even numbering)	Installation Diagram to use:	1	2	3	7	8	9	1	2	3
		Panel 1 Configuration setting:	Top Feed	Top Feed	Top Feed	Bottom Feed	Bottom Feed	Bottom Feed	Top Feed	Top Feed	Top Feed
		Panel 2 Configuration setting:				Top Feed	Top Feed	Top Feed	Top Feed	Top Feed	Top Feed
	Dual Row - Bottom Feed (with Odd/Even numbering)	Installation Diagram to use:	4	5	6	7	8	9	4	5	6
		Panel 1 Configuration setting:	Bottom Feed	Bottom Feed	Bottom Feed	Bottom Feed	Bottom Feed	Bottom Feed	Bottom Feed	Bottom Feed	Bottom Feed
		Panel 2 Configuration setting:				Top Feed	Top Feed	Top Feed	Bottom Feed	Bottom Feed	Bottom Feed
	Dual Row - Top Feed (with Sequential numbering)	Installation Diagram to use:	10	11	12	13	14	15	10	11	12
		Panel 1 Configuration setting:	Sequential	Sequential	Sequential	Sequential	Sequential	Sequential	Sequential	Sequential	Sequential
		Panel 2 Configuration setting:				Sequential	Sequential	Sequential	Sequential	Sequential	Sequential
	Dual Row - Bottom Feed (with Sequential numbering)	Installation Diagram to use:	10	11	12	13	14	15	10	11	12
		Panel 1 Configuration setting:	Sequential	Sequential	Sequential	Sequential	Sequential	Sequential	Sequential	Sequential	Sequential
		Panel 2 Configuration setting:				Sequential	Sequential	Sequential	Sequential	Sequential	Sequential
	Single Row Vertical (with Sequential numbering)	Installation Diagram to use:	16	17	18						
		Panel 1 Configuration setting:	Sequential	Sequential	Sequential						
		Panel 2 Configuration setting:									
	Dual Row - Any Feed (with Odd/Even numbering alternate strip mounting*)	Installation Diagram to use:			19*						
		Panel 1 Configuration setting:			Odd/Even						
		Panel 2 Configuration setting:									

* this configuration is used in rare circumstances where both strips don't fit in the same orientation

Orientation of circuit breaker rows:	Rows of Circuit Breakers:	number of E30 channels:	Single Row of Breakers			Two Rows of Breakers		
			≤24 Breakers	≤36 Breakers	≤42 Breakers	≤24 Breakers per row	≤36 Breakers per row	≤42 Breakers per row
			24	36	42	48	72	84
Horizontal	Single Row (with Sequential numbering)	Installation Diagram to use:	20	21	22			
		Panel 1 Configuration setting:	Sequential	Sequential	Sequential			
		Panel 2 Configuration setting:						
	Dual Row (with Sequential numbering)	Installation Diagram to use:	23	24	25	26	27	28
		Panel 1 Configuration setting:	Sequential	Sequential	Sequential	Sequential	Sequential	Sequential
		Panel 2 Configuration setting:				Sequential	Sequential	Sequential

Appendix

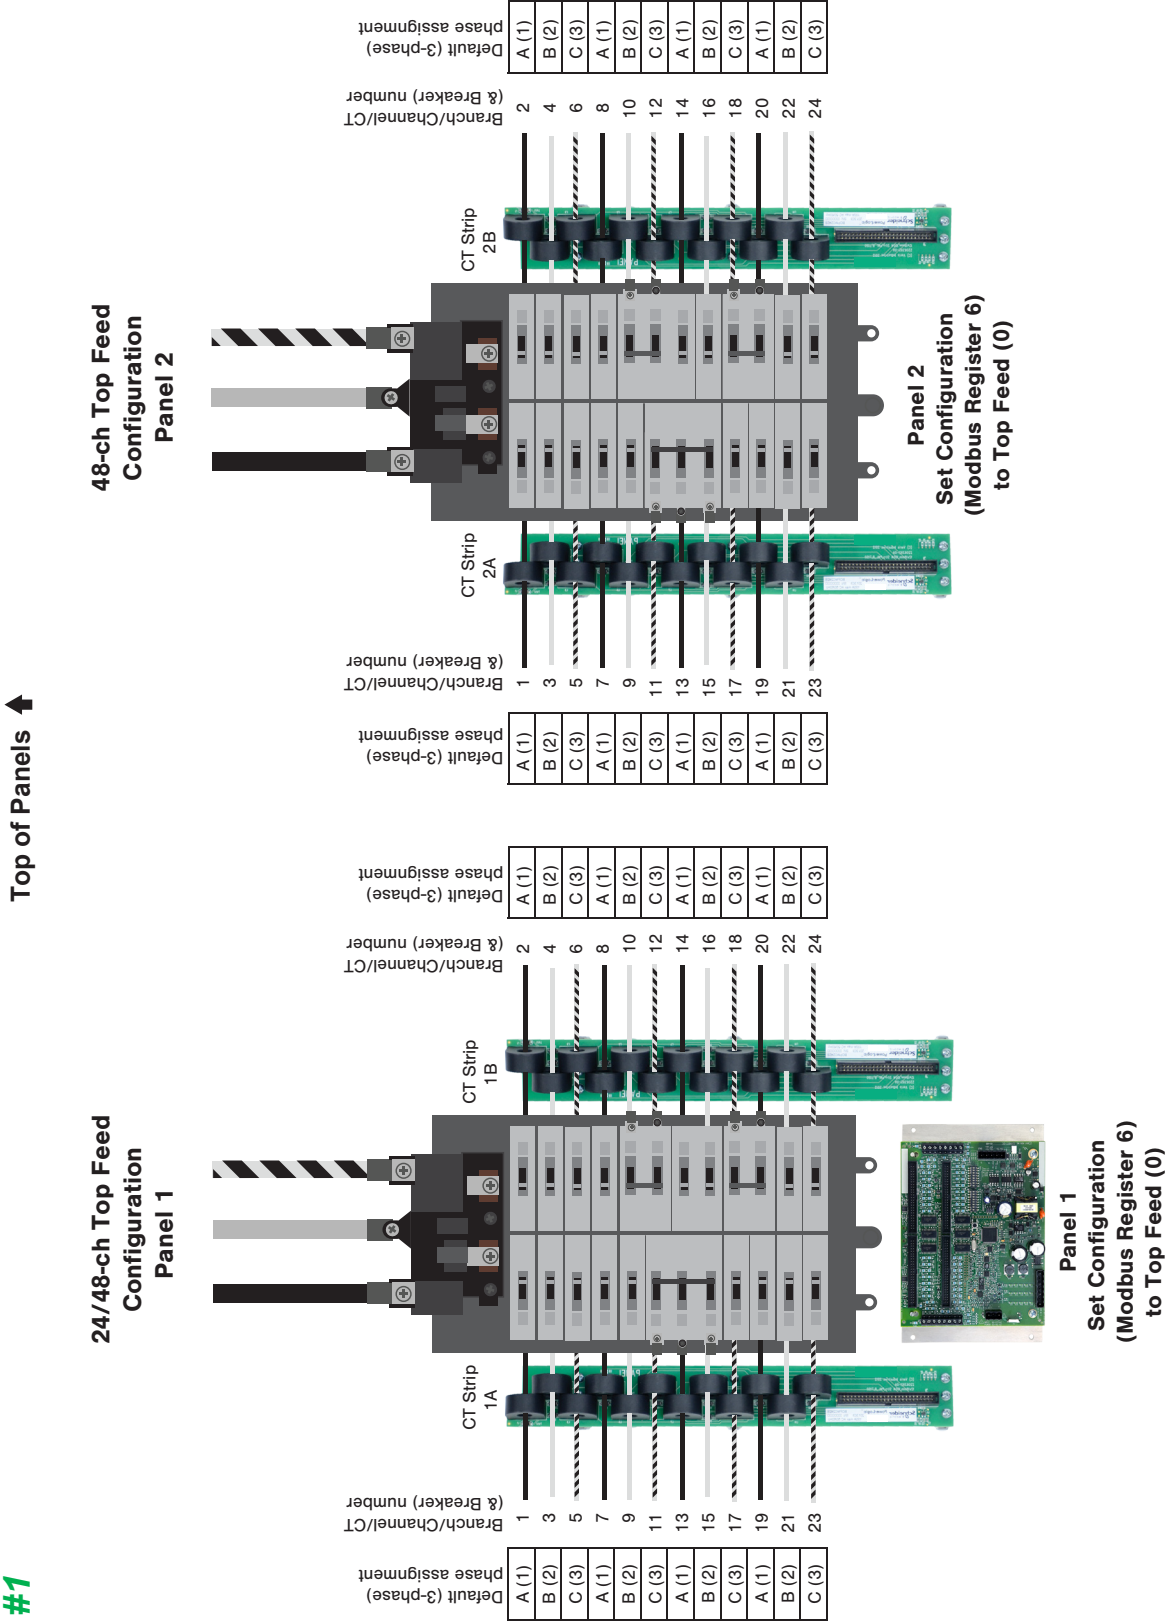


Appendix

Top of Panels ↑


#2

36/72-ch Top Feed Configuration
Panel 1

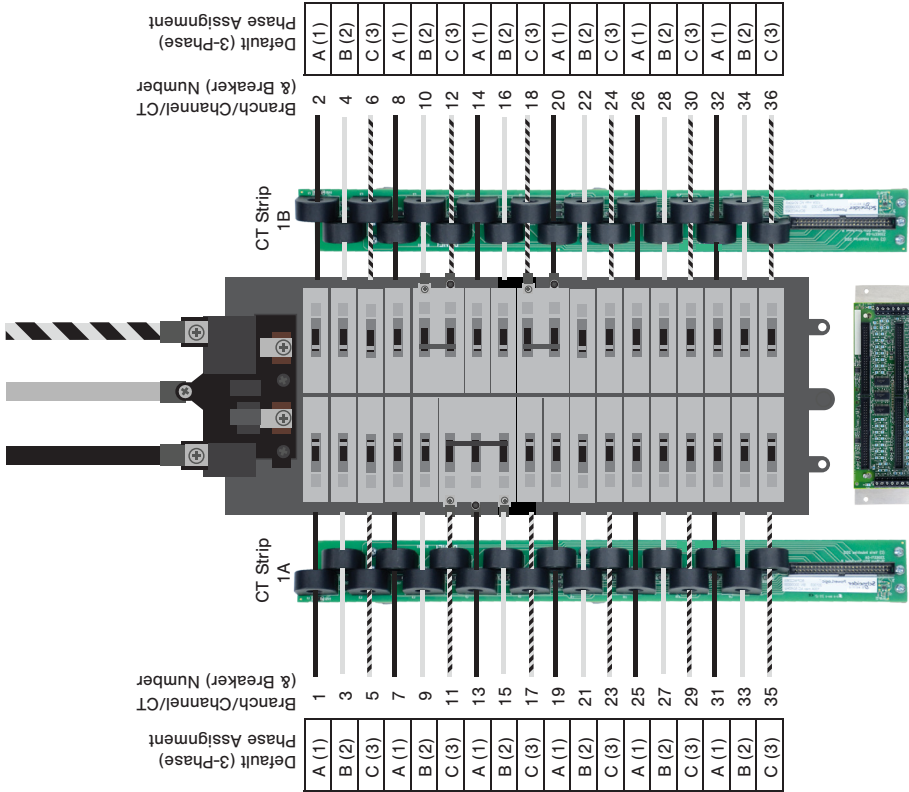

Panel 1
Set Configuration (Modbus Register 6) to Top Feed (0)

72-ch Top Feed Configuration
Panel 2

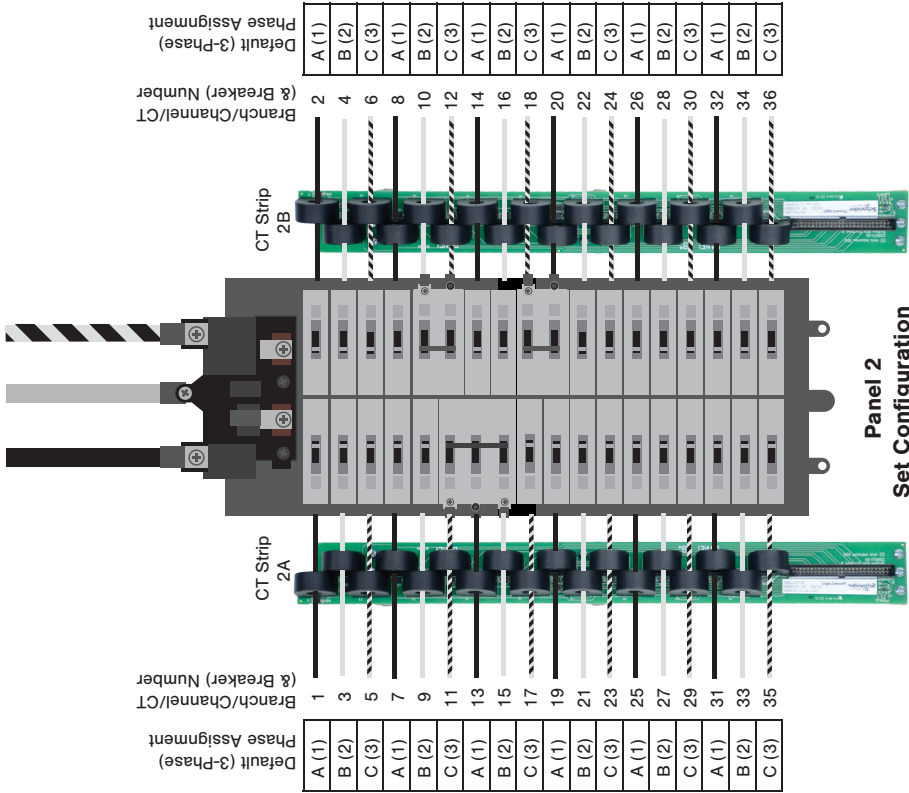


Panel 2
Set Configuration (Modbus Register 6) to Top Feed (0)

Appendix

Top of Panels ↑


#3

42/84-ch Top Feed Configuration
Panel 1

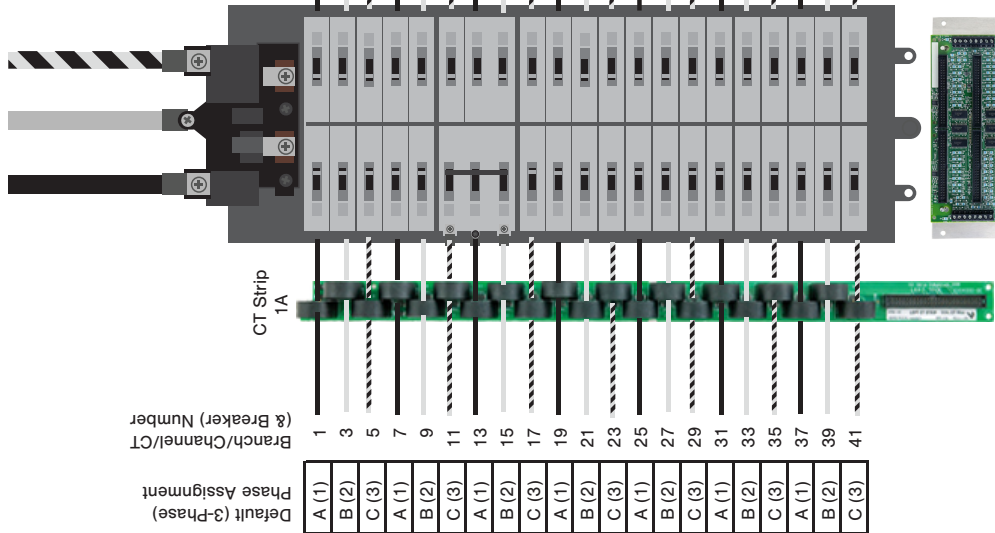

Panel 1
Set Configuration (Modbus Register 6) to Top Feed (0)

84-ch Top Feed Configuration
Panel 2

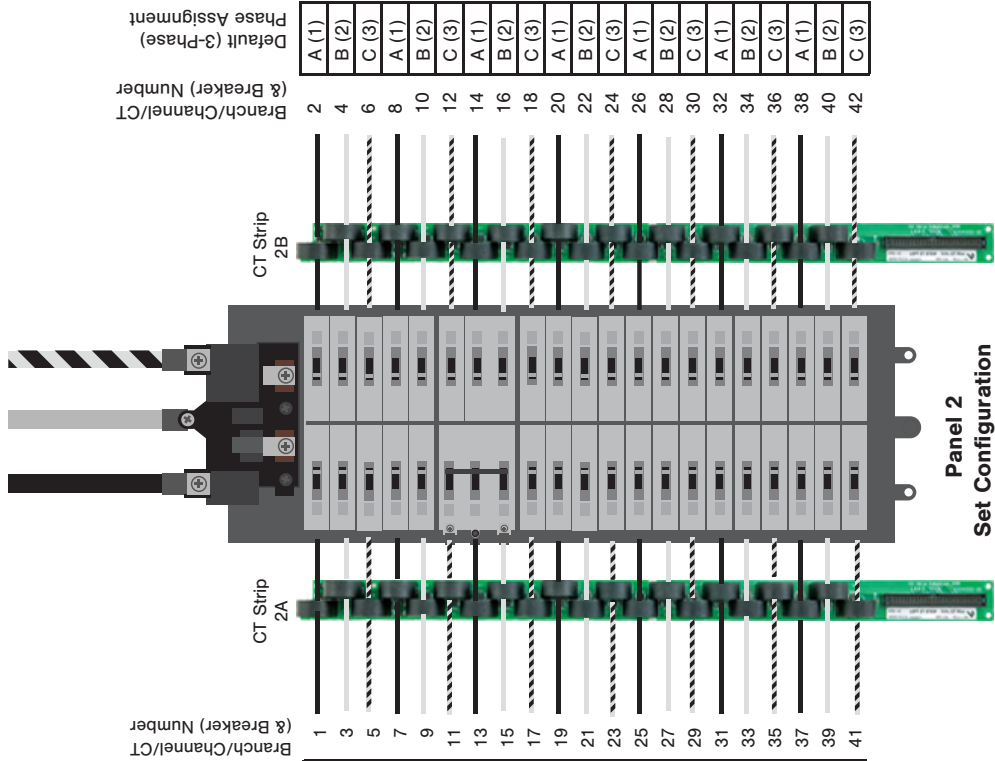


Panel 2
Set Configuration (Modbus Register 6) to Top Feed (0)

Appendix

Top of Panels ↑


#4

24/48-ch Bottom Feed Configuration
Panel 1

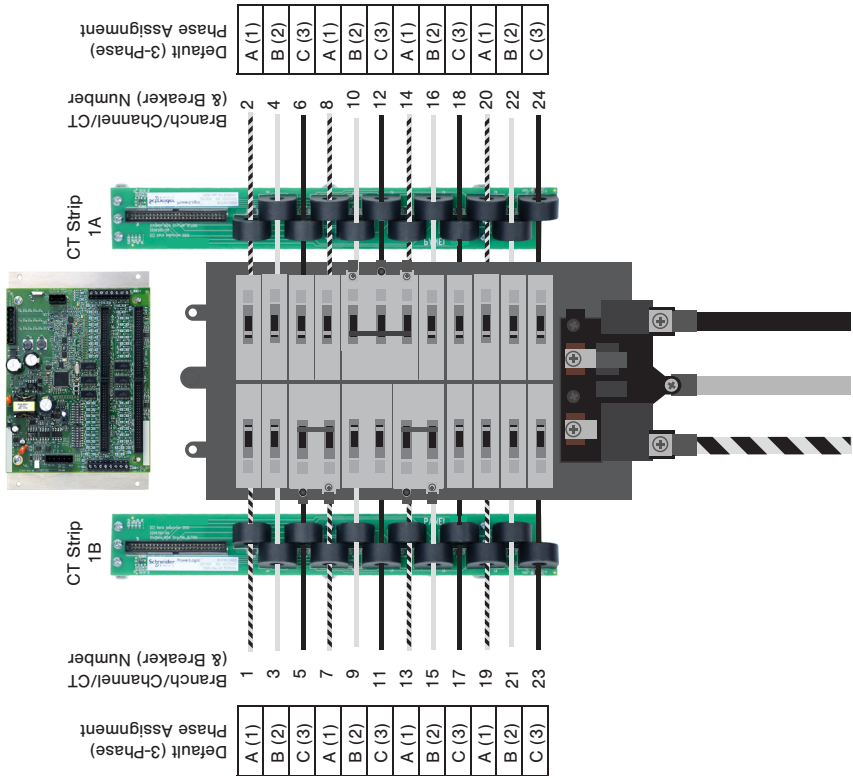

Panel 1
Set Configuration
(Modbus Register 6)
to Bottom Feed (1)

48-ch Bottom Feed Configuration
Panel 2

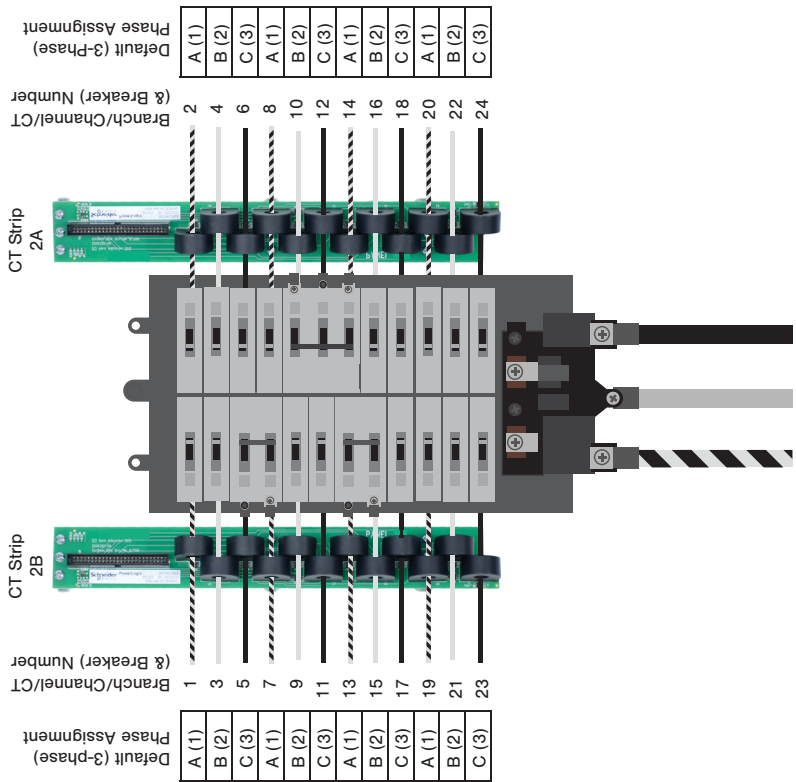

Panel 2
Set Configuration
(Modbus Register 6)
to Bottom Feed (1)

Appendix

Top of Panels ↑

36/72-ch Bottom Feed Configuration
Panel 1



Phase Assignment	Branch/Channel/CT (& Breaker) Number
A (1)	1
B (2)	3
C (3)	5
A (1)	7
B (2)	9
C (3)	11
A (1)	13
B (2)	15
C (3)	17
A (1)	19
B (2)	21
C (3)	23
A (1)	25
B (2)	27
C (3)	29
A (1)	31
B (2)	33
C (3)	35



Phase Assignment	Branch/Channel/CT (& Breaker) Number
A (1)	2
B (2)	4
C (3)	6
A (1)	8
B (2)	10
C (3)	12
A (1)	14
B (2)	16
C (3)	18
A (1)	20
B (2)	22
C (3)	24
A (1)	26
B (2)	28
C (3)	30
A (1)	32
B (2)	34
C (3)	36



Panel 1
Set Configuration
(Modbus Register 6)
to Bottom Feed (1)

72-ch Bottom Feed Configuration
Panel 2

Phase Assignment	Branch/Channel/CT (& Breaker) Number
A (1)	1
B (2)	3
C (3)	5
A (1)	7
B (2)	9
C (3)	11
A (1)	13
B (2)	15
C (3)	17
A (1)	19
B (2)	21
C (3)	23
A (1)	25
B (2)	27
C (3)	29
A (1)	31
B (2)	33
C (3)	35



Phase Assignment	Branch/Channel/CT (& Breaker) Number
A (1)	2
B (2)	4
C (3)	6
A (1)	8
B (2)	10
C (3)	12
A (1)	14
B (2)	16
C (3)	18
A (1)	20
B (2)	22
C (3)	24
A (1)	26
B (2)	28
C (3)	30
A (1)	32
B (2)	34
C (3)	36




Panel 2
Set Configuration
(Modbus Register 6)
to Bottom Feed (1)

Appendix


Top of Panels ↑

#6

42/84-ch Bottom Feed Configuration Panel 1

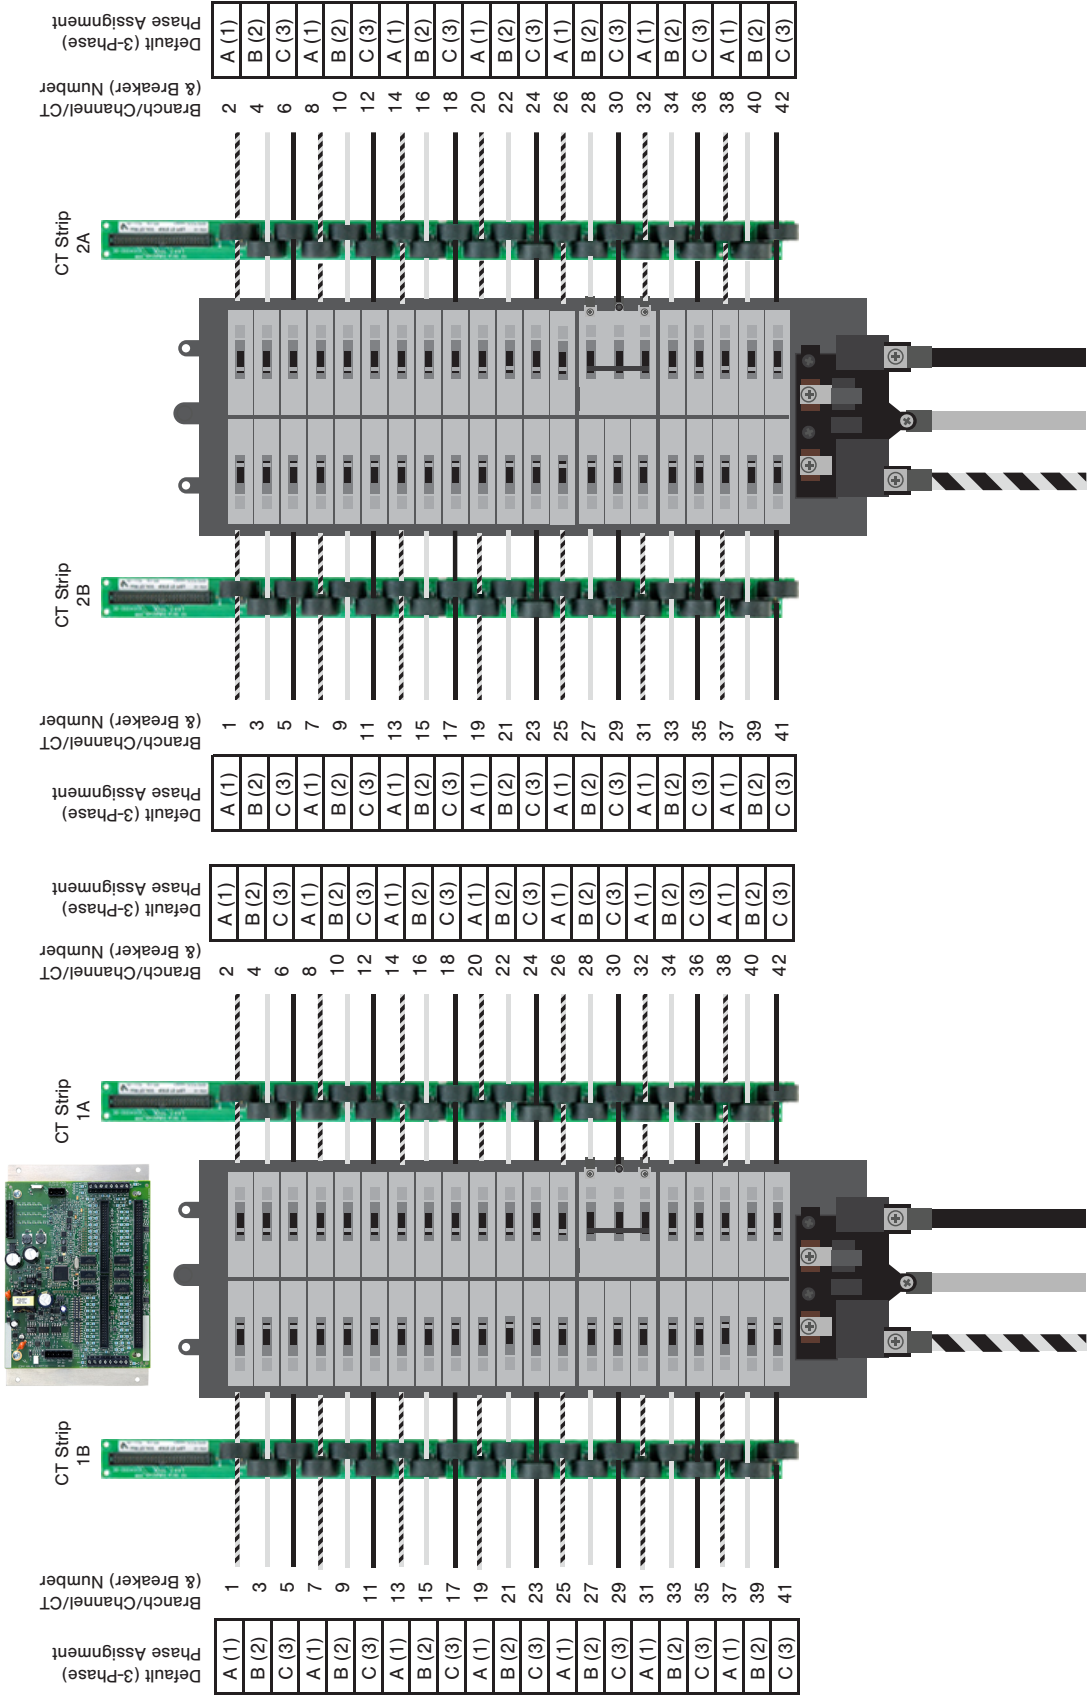

84-ch Bottom Feed Configuration Panel 2

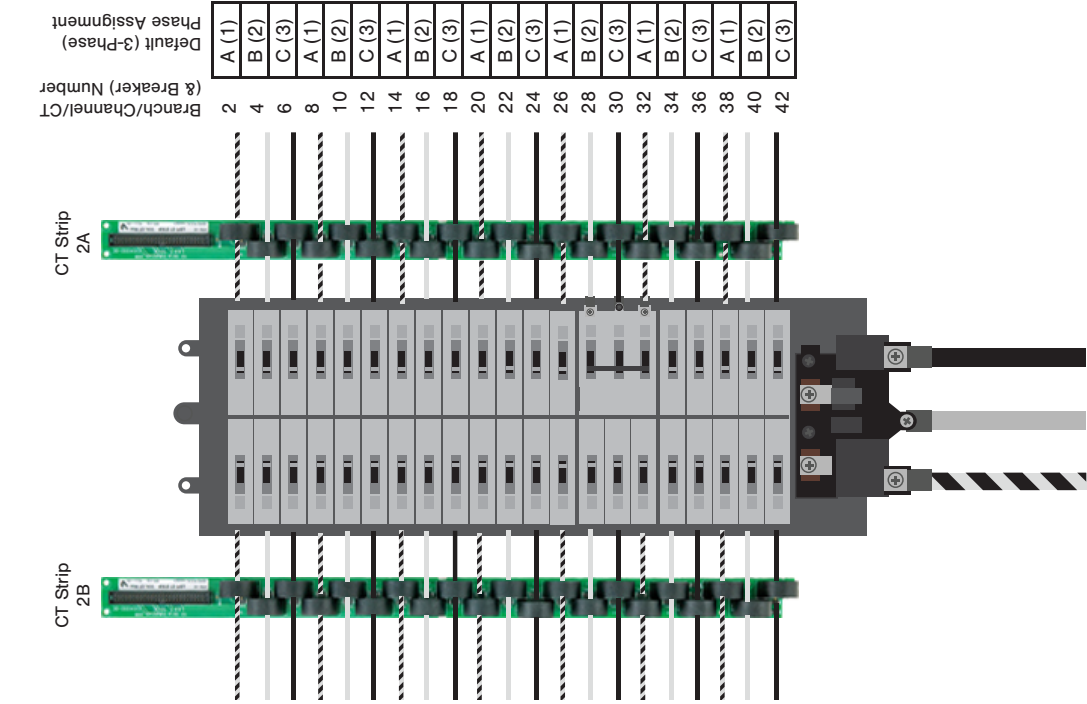


Appendix

#7

Top of Panel ↑

48-ch Large Panel Odd/Even Configuration

Note: This application does NOT use the Odd/Even configuration setting.

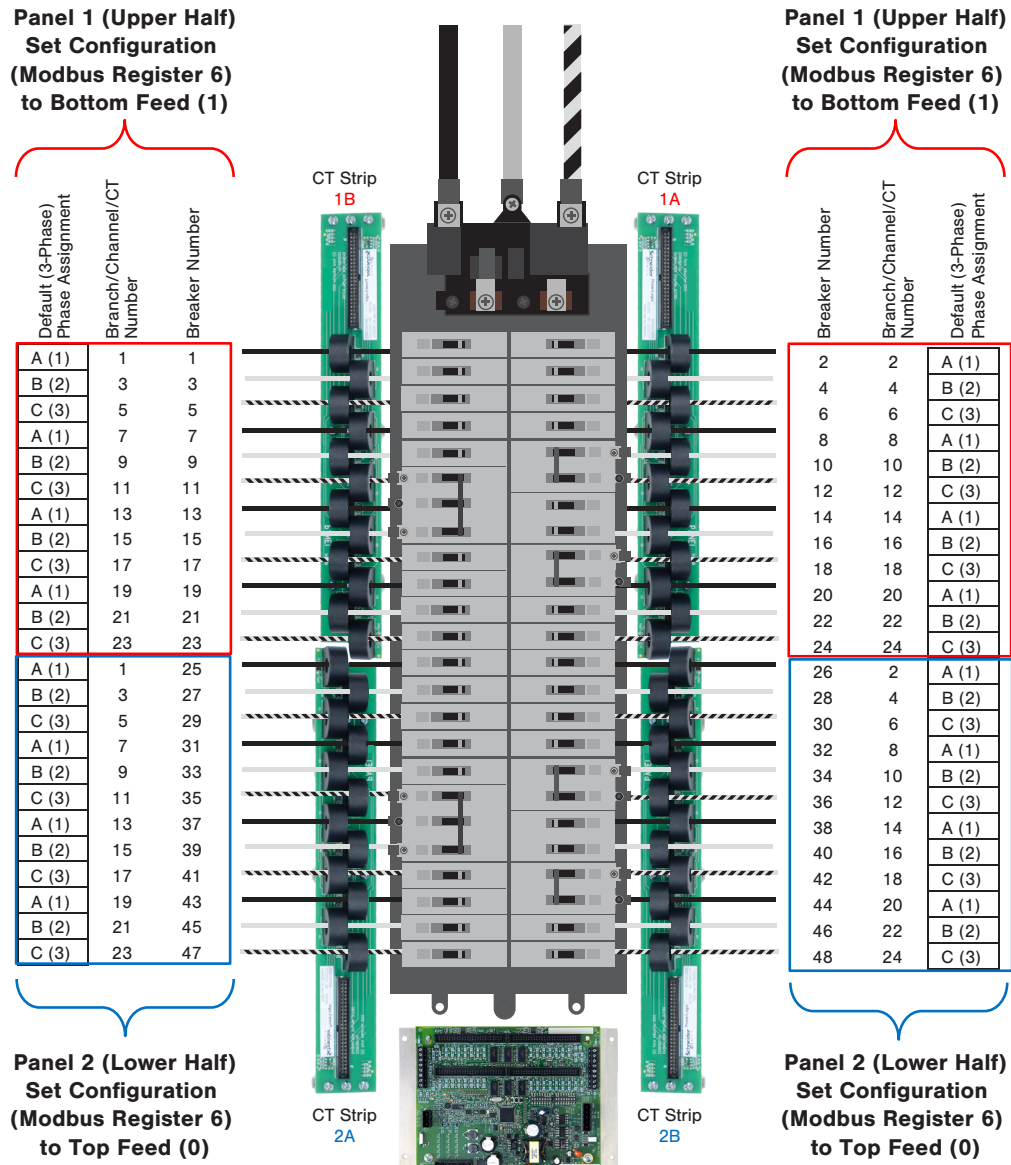

Appendix #8

Top of Panel ↑

72-ch Large Panel Odd/Even Configuration

Note: This application does NOT use the Odd/Even configuration setting.

Panel 1 (Upper Half) Set Configuration (Modbus Register 6) to Bottom Feed (1)

Default (3-Phase) Phase Assignment	Branch/Channel/CT Number	Breaker Number
A (1)	1	1
B (2)	3	3
C (3)	5	5
A (1)	7	7
B (2)	9	9
C (3)	11	11
A (1)	13	13
B (2)	15	15
C (3)	17	17
A (1)	19	19
B (2)	21	21
C (3)	23	23
A (1)	25	25
B (2)	27	27
C (3)	29	29
A (1)	31	31
B (2)	33	33
C (3)	35	35
A (1)	1	37
B (2)	3	39
C (3)	5	41
A (1)	7	43
B (2)	9	45
C (3)	11	47
A (1)	13	49
B (2)	15	51
C (3)	17	53
A (1)	19	55
B (2)	21	57
C (3)	23	59
A (1)	25	61
B (2)	27	63
C (3)	29	65
A (1)	31	67
B (2)	33	69
C (3)	35	71

Panel 2 (Lower Half) Set Configuration (Modbus Register 6) to Top Feed (0)

Panel 1 (Upper Half) Set Configuration (Modbus Register 6) to Bottom Feed (1)

Breaker Number	Branch/Channel/CT Number	Default (3-Phase) Phase Assignment
2	2	A (1)
4	4	B (2)
6	6	C (3)
8	8	A (1)
10	10	B (2)
12	12	C (3)
14	14	A (1)
16	16	B (2)
18	18	C (3)
20	20	A (1)
22	22	B (2)
24	24	C (3)
26	26	A (1)
28	28	B (2)
30	30	C (3)
32	32	A (1)
34	34	B (2)
36	36	C (3)
38	2	A (1)
40	4	B (2)
42	6	C (3)
44	8	A (1)
46	10	B (2)
48	12	C (3)
50	14	A (1)
52	16	B (2)
54	18	C (3)
56	20	A (1)
58	22	B (2)
60	24	C (3)
62	26	A (1)
64	28	B (2)
66	30	C (3)
68	32	A (1)
70	34	B (2)
72	36	C (3)

Panel 2 (Lower Half) Set Configuration (Modbus Register 6) to Top Feed (0)

Appendix #9

Top of Panel ↑

84-ch Large Panel Odd/Even Configuration

Note: This application does NOT use the Odd/Even configuration setting.

Panel 1 (Upper Half)
 Set Configuration (Modbus Register 6)
 to Bottom Feed (1)

Default (3-Phase) Phase Assignment	Branch/Channel/CT Number	Breaker Number
A (1)	1	1
B (2)	3	3
C (3)	5	5
A (1)	7	7
B (2)	9	9
C (3)	11	11
A (1)	13	13
B (2)	15	15
C (3)	17	17
A (1)	19	19
B (2)	21	21
C (3)	23	23
A (1)	25	25
B (2)	27	27
C (3)	29	29
A (1)	31	31
B (2)	33	33
C (3)	35	35
A (1)	37	37
B (2)	39	39
C (3)	41	41


A (1)	1	43
B (2)	3	45
C (3)	5	47
A (1)	7	49
B (2)	9	51
C (3)	11	53
A (1)	13	55
B (2)	15	57
C (3)	17	59
A (1)	19	61
B (2)	21	63
C (3)	23	65
A (1)	25	67
B (2)	27	69
C (3)	29	71
A (1)	31	73
B (2)	33	75
C (3)	35	77
A (1)	37	79
B (2)	39	81
C (3)	41	83

Panel 2 (Upper Half)
 Set Configuration (Modbus Register 6)
 to Top Feed (0)

Panel 1 (Upper Half)
 Set Configuration (Modbus Register 6)
 to Bottom Feed (1)

Breaker Number	Branch/Channel/CT Number	Default (3-Phase) Phase Assignment
2	2	A (1)
4	4	B (2)
6	6	C (3)
8	8	A (1)
10	10	B (2)
12	12	C (3)
14	14	A (1)
16	16	B (2)
18	18	C (3)
20	20	A (1)
22	22	B (2)
24	24	C (3)
26	26	A (1)
28	28	B (2)
30	30	C (3)
32	32	A (1)
34	34	B (2)
36	36	C (3)
38	38	A (1)
40	40	B (2)
42	42	C (3)

44	2	A (1)
46	4	B (2)
48	6	C (3)
50	8	A (1)
52	10	B (2)
54	12	C (3)
56	14	A (1)
58	16	B (2)
60	18	C (3)
62	20	A (1)
64	22	B (2)
66	24	C (3)
68	26	A (1)
70	28	B (2)
72	30	C (3)
74	32	A (1)
76	34	B (2)
78	36	C (3)
80	38	A (1)
82	40	B (2)
84	42	C (3)

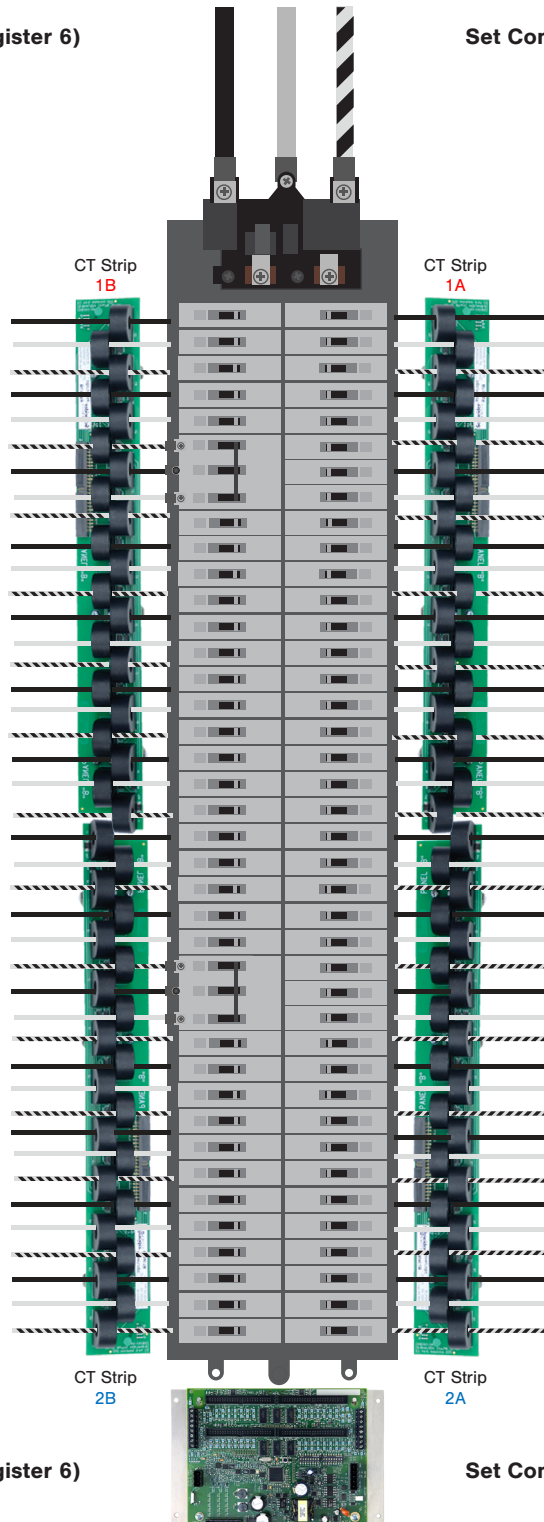
Panel 2 (Upper Half)
 Set Configuration (Modbus Register 6)
 to Top Feed (0)


Appendix

#10


Top of Panels ↑

24/48-ch Top Feed Configuration
Panel 1

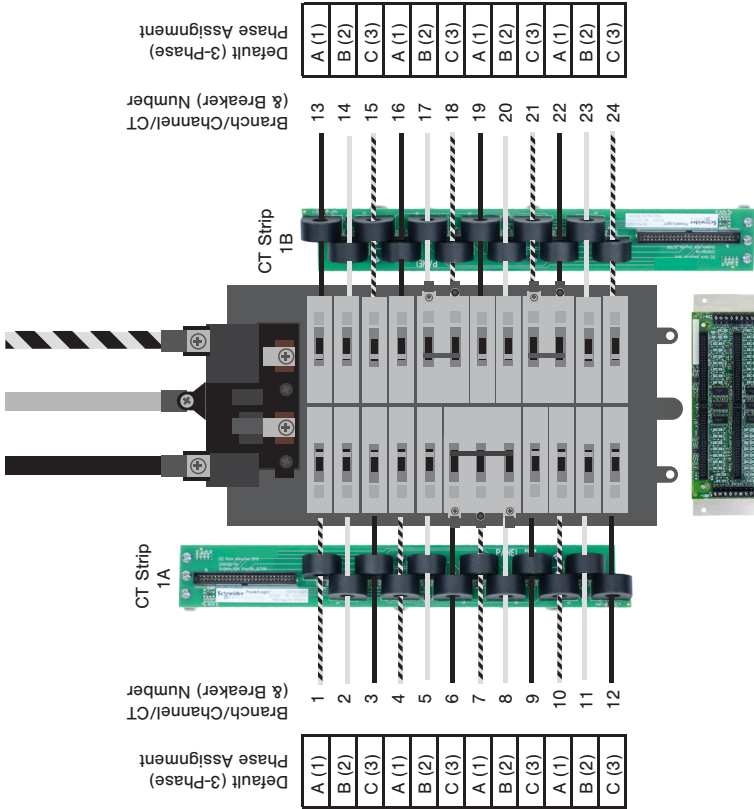

Panel 1
Set Configuration
(Modbus Register 6)
to Sequential (2)

48-ch Top Feed Configuration
Panel 2

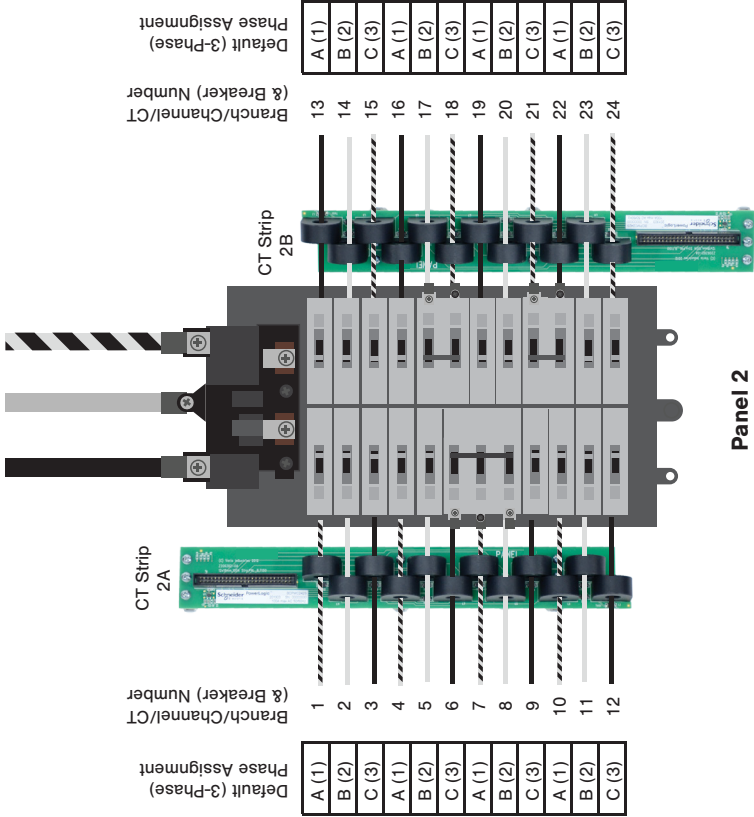


Panel 2
Set Configuration
(Modbus Register 6)
to Sequential (2)

Appendix

Top of Panels ↑

#11

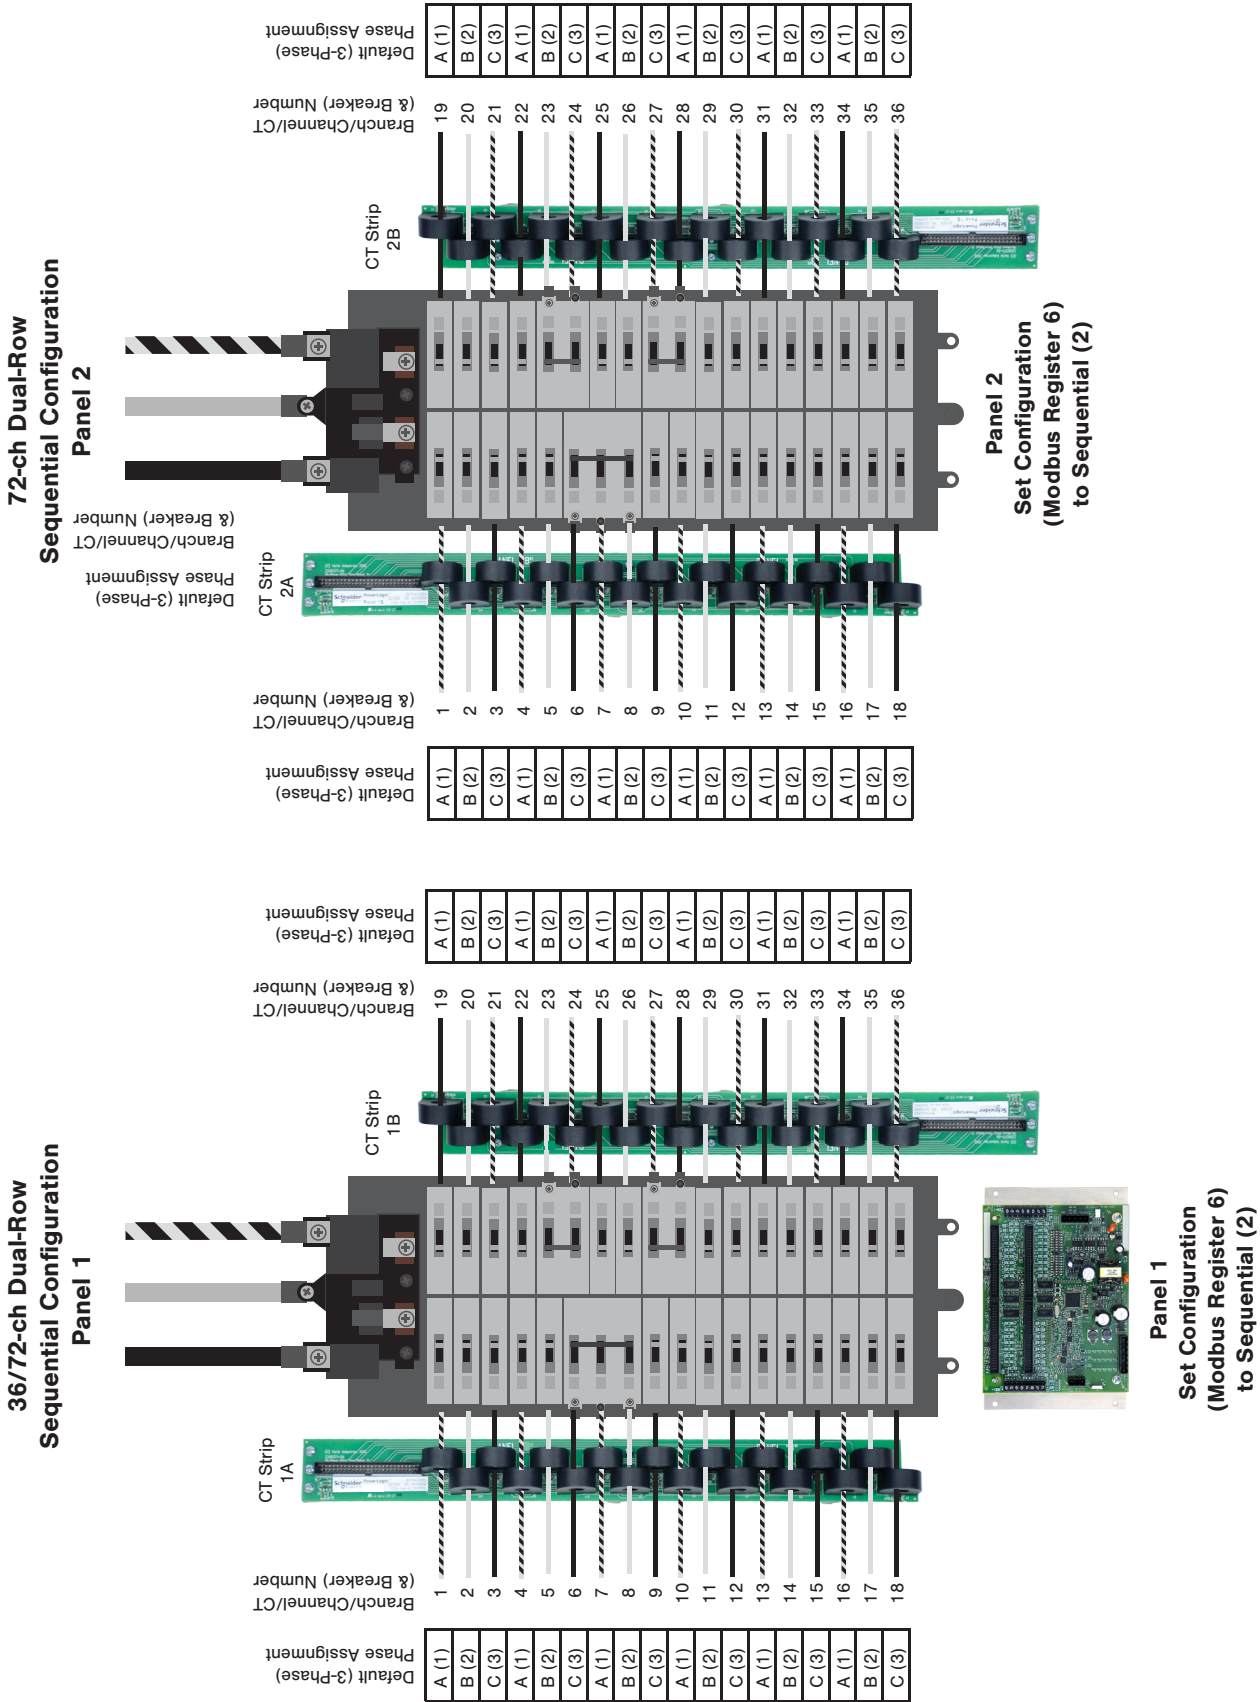


Appendix

Top of Panels


#12

42/84-ch Bottom Feed Configuration
Panel 1

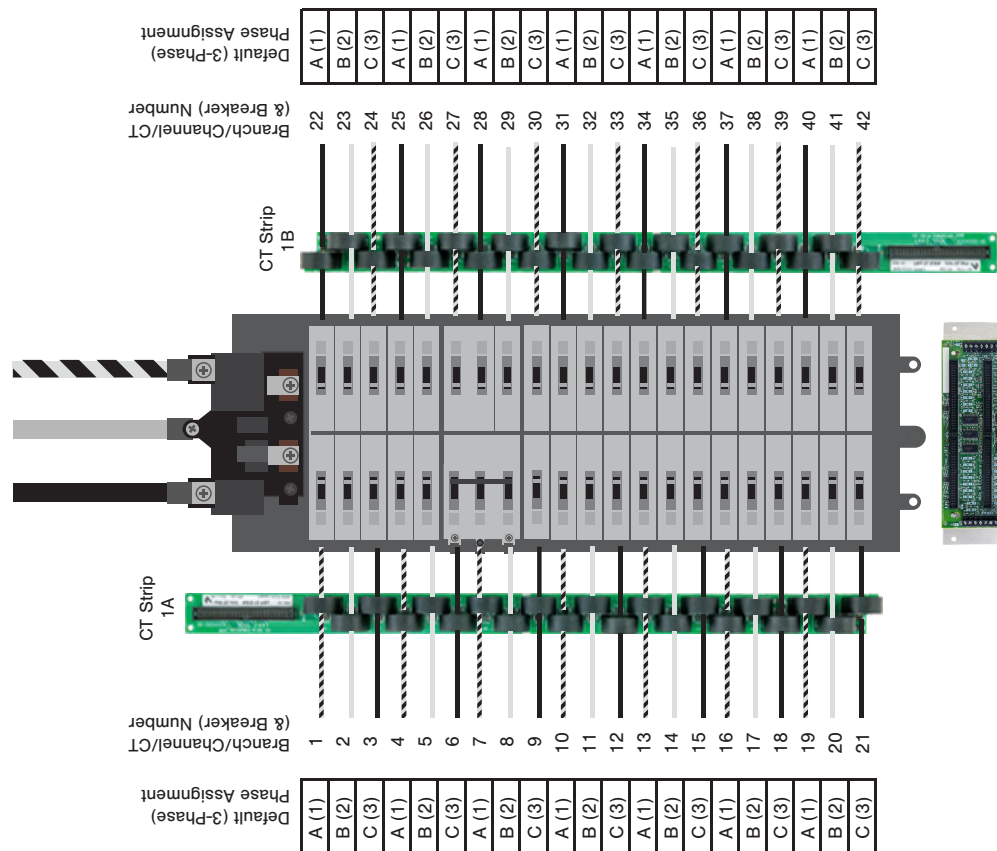

Panel 1
Set Configuration
(Modbus Register 6)
to Top (0)

84-ch Bottom Feed Configuration
Panel 2

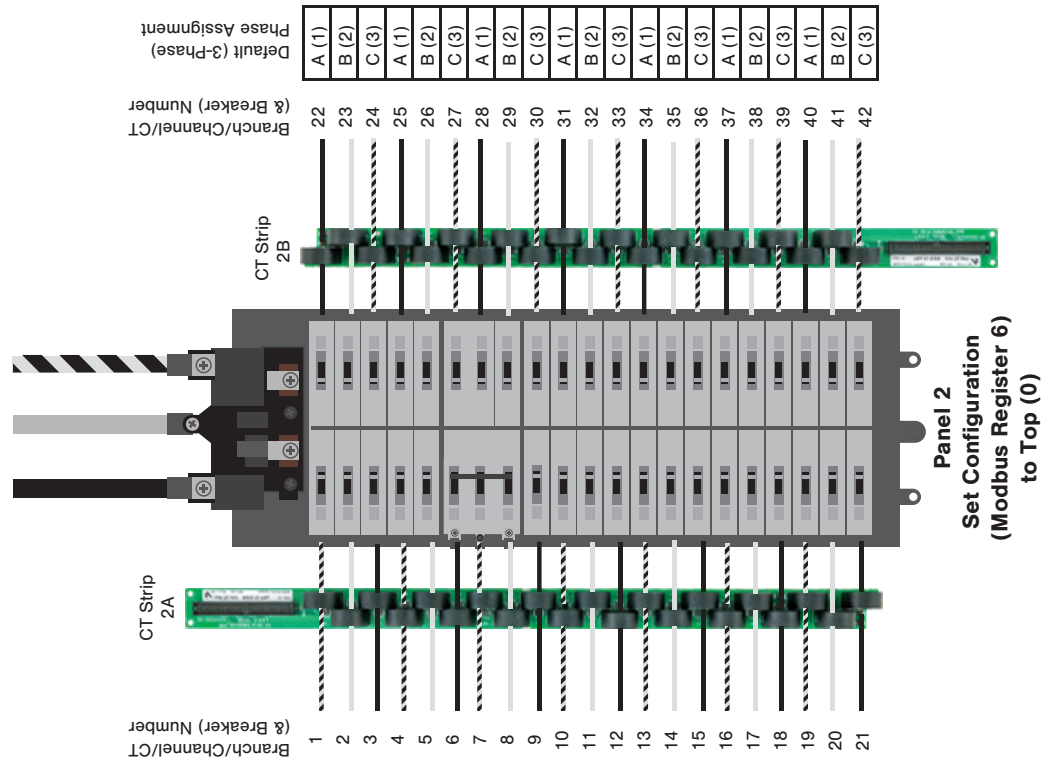


Panel 2
Set Configuration
(Modbus Register 6)
to Top (0)

Appendix

#13

48-ch Dual-Row Large Panel Sequential Configuration Panel 1

48-ch Dual-Row Large Panel Sequential Configuration Panel 2

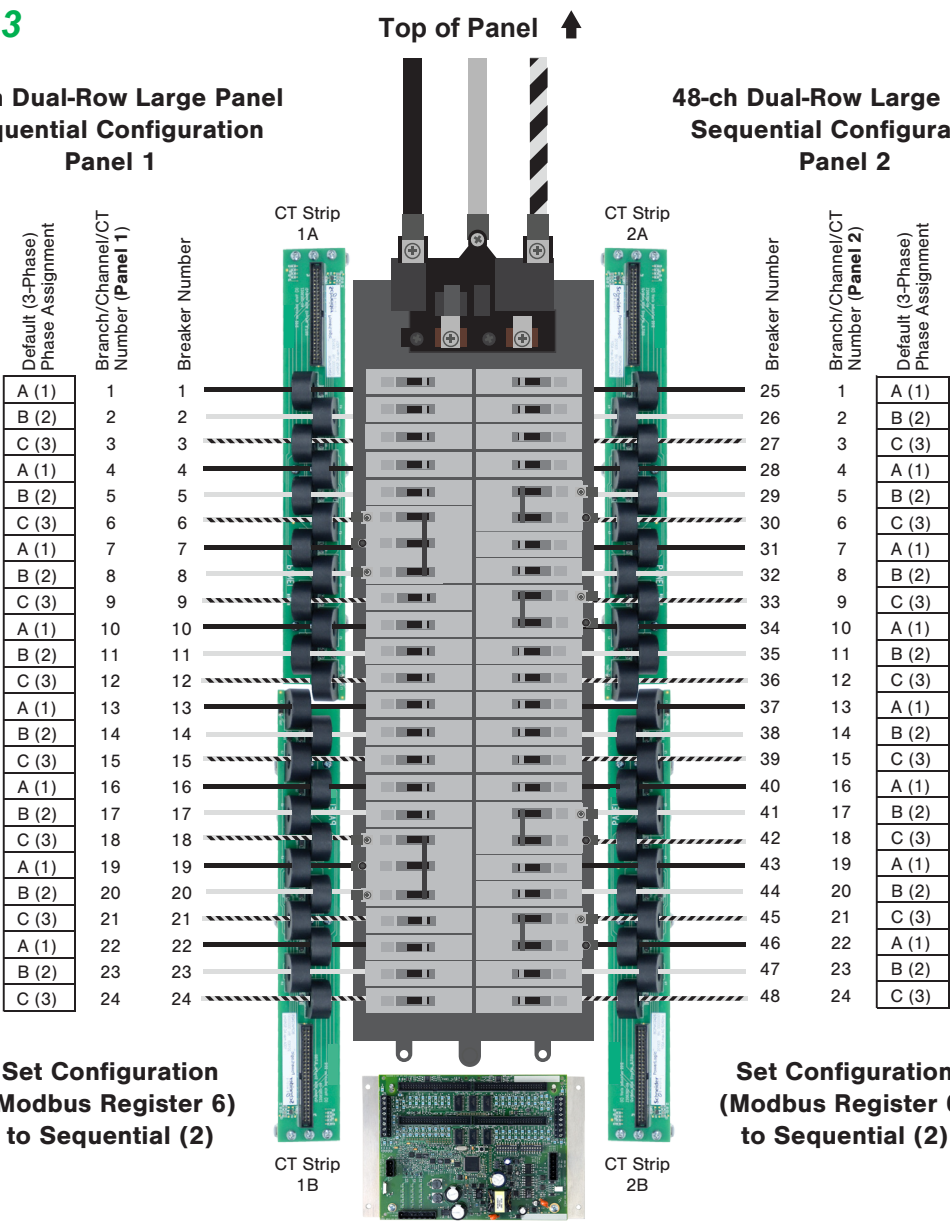

Appendix #14

Top of Panels ↑

**72-ch Dual-Row Large Panel
Sequential Configuration
Panel 1**

Default (3-Phase) Phase Assignment	Branch/Channel/CT Number (Panel 1)	Breaker Number
A (1)	1	1
B (2)	2	2
C (3)	3	3
A (1)	4	4
B (2)	5	5
C (3)	6	6
A (1)	7	7
B (2)	8	8
C (3)	9	9
A (1)	10	10
B (2)	11	11
C (3)	12	12
A (1)	13	13
B (2)	14	14
C (3)	15	15
A (1)	16	16
B (2)	17	17
C (3)	18	18
A (1)	19	19
B (2)	20	20
C (3)	21	21
A (1)	22	22
B (2)	23	23
C (3)	24	24
A (1)	25	25
B (2)	26	26
C (3)	27	27
A (1)	28	28
B (2)	29	29
C (3)	30	30
A (1)	31	31
B (2)	32	32
C (3)	33	33
A (1)	34	34
B (2)	35	35
C (3)	36	36

**Set Configuration
(Modbus Register 6)
to Sequential (2)**

CT Strip 1A

CT Strip 1B



**72-ch Dual-Row Large Panel
Sequential Configuration
Panel 2**

Breaker Number	Branch/Channel/CT Number (Panel 2)	Default (3-Phase) Phase Assignment
37	1	A (1)
38	2	B (2)
39	3	C (3)
40	4	A (1)
41	5	B (2)
42	6	C (3)
43	7	A (1)
44	8	B (2)
45	9	C (3)
46	10	A (1)
47	11	B (2)
48	12	C (3)
49	13	A (1)
50	14	B (2)
51	15	C (3)
52	16	A (1)
53	17	B (2)
54	18	C (3)
55	19	A (1)
56	20	B (2)
57	21	C (3)
58	22	A (1)
59	23	B (2)
60	24	C (3)
61	25	A (1)
62	26	B (2)
63	27	C (3)
64	28	A (1)
65	29	B (2)
66	30	C (3)
67	31	A (1)
68	32	B (2)
69	33	C (3)
70	34	A (1)
71	35	B (2)
72	36	C (3)

**Set Configuration
(Modbus Register 6)
to Sequential (2)**

CT Strip 2B

Appendix #15

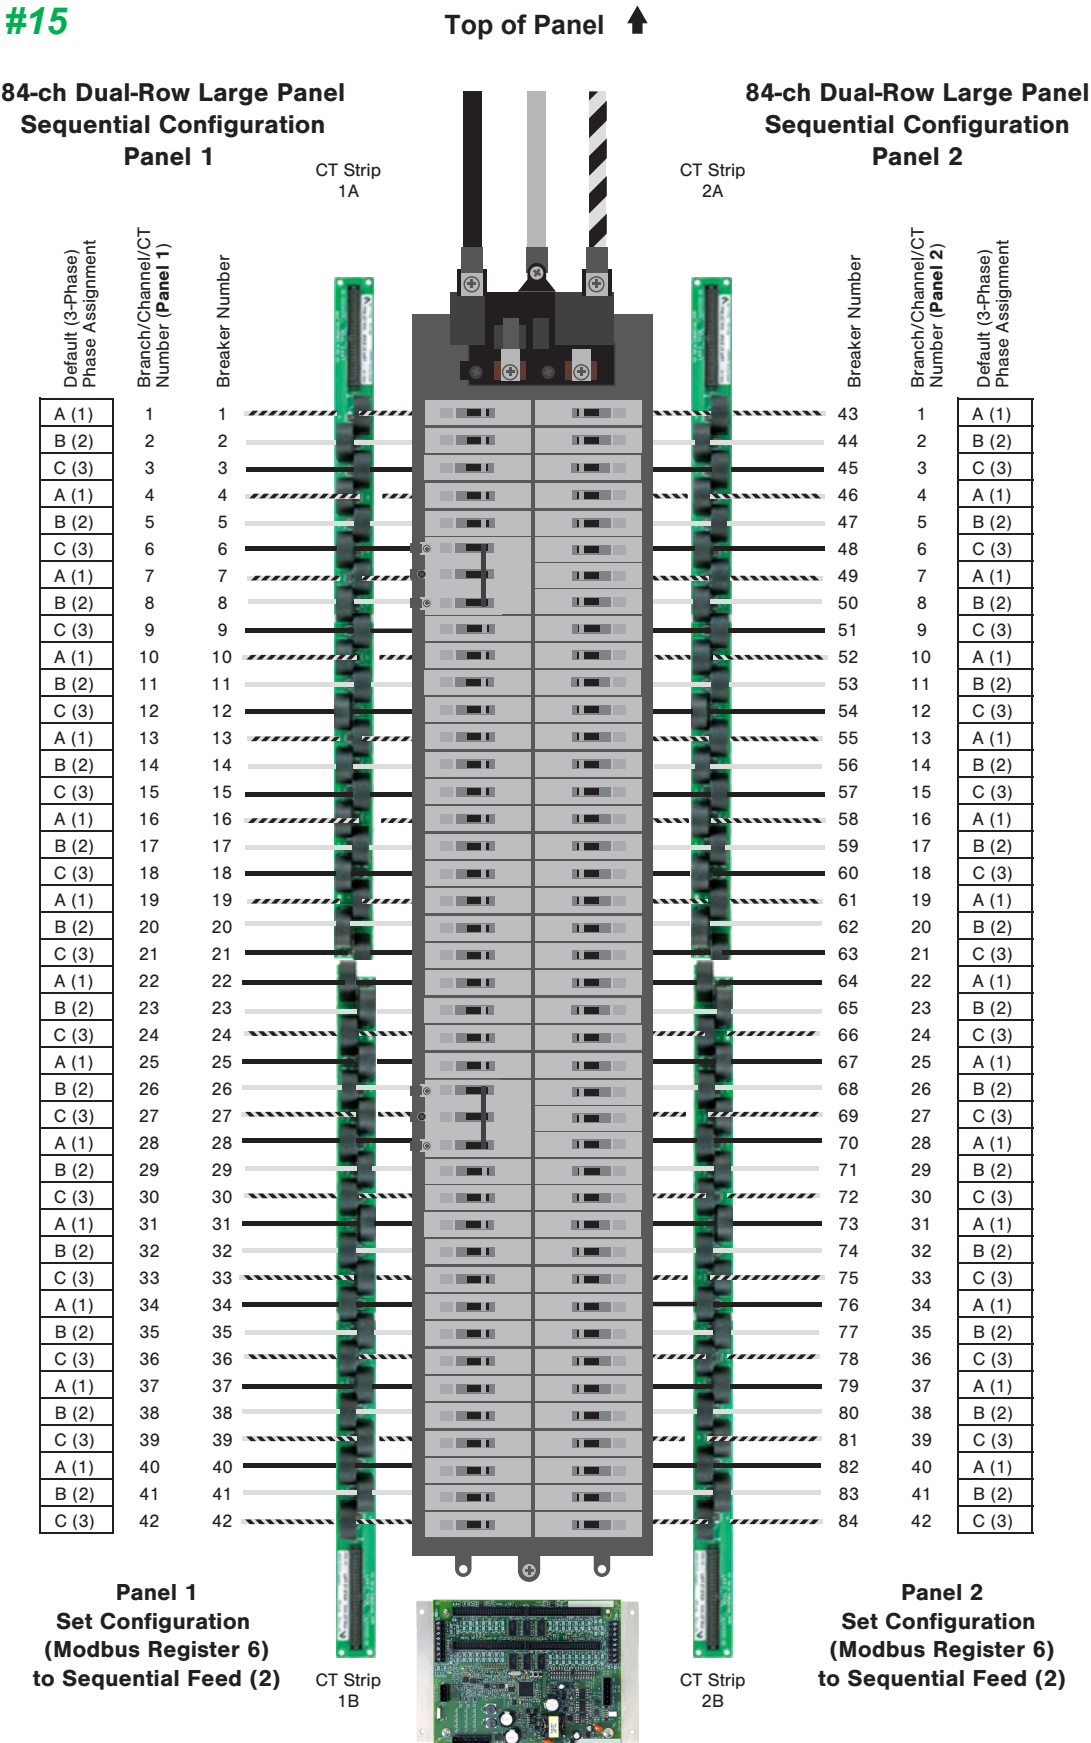


Appendix

#16

Top of Panel ↑

24-ch Single-Row
Sequential Configuration

Set Configuration
(Modbus Register 6)
to Sequential (2)

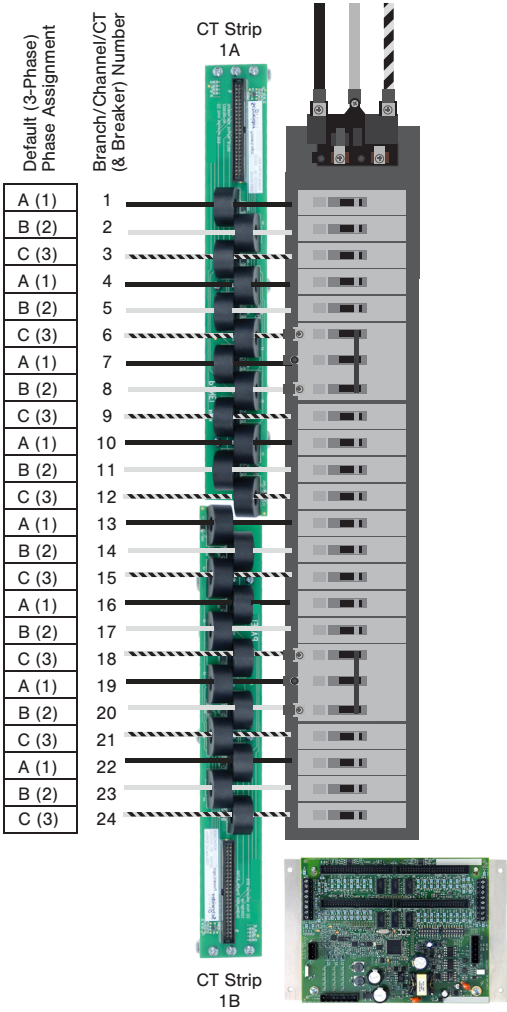


Appendix

#17

Top of Panel ↑

36-ch Single-Row
Sequential Configuration


Set Configuration
(Modbus Register 6)
to Sequential (2)

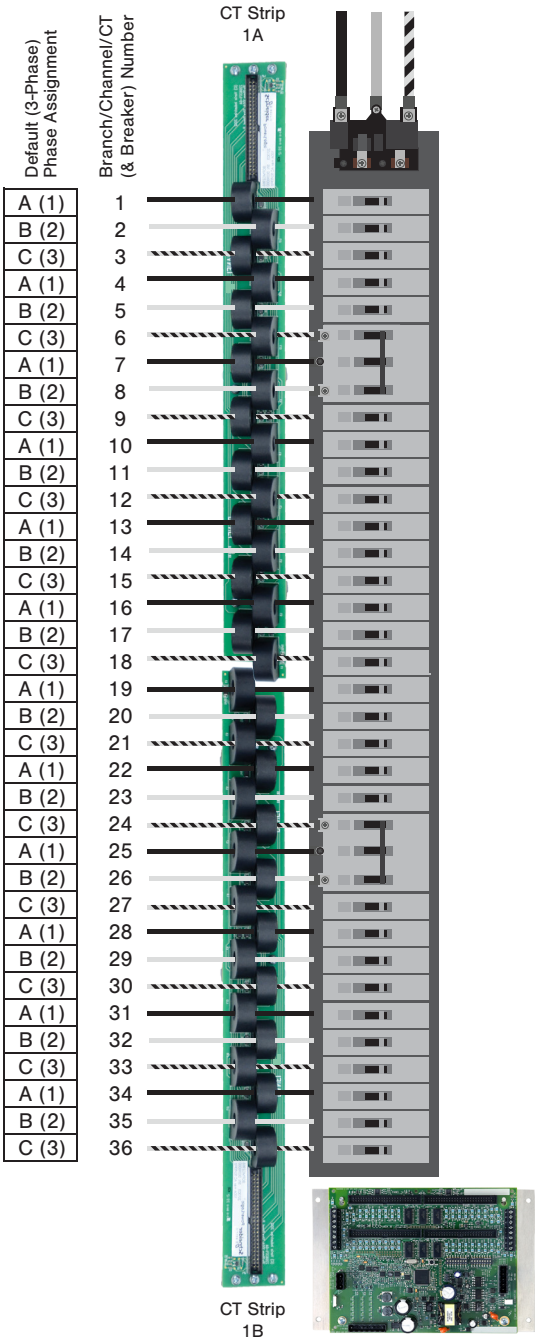

Appendix #18


Top of Panel ↑
42-ch Single-Row
Sequential Configuration

Set Configuration
(Modbus Register 6)
to Sequential (2)

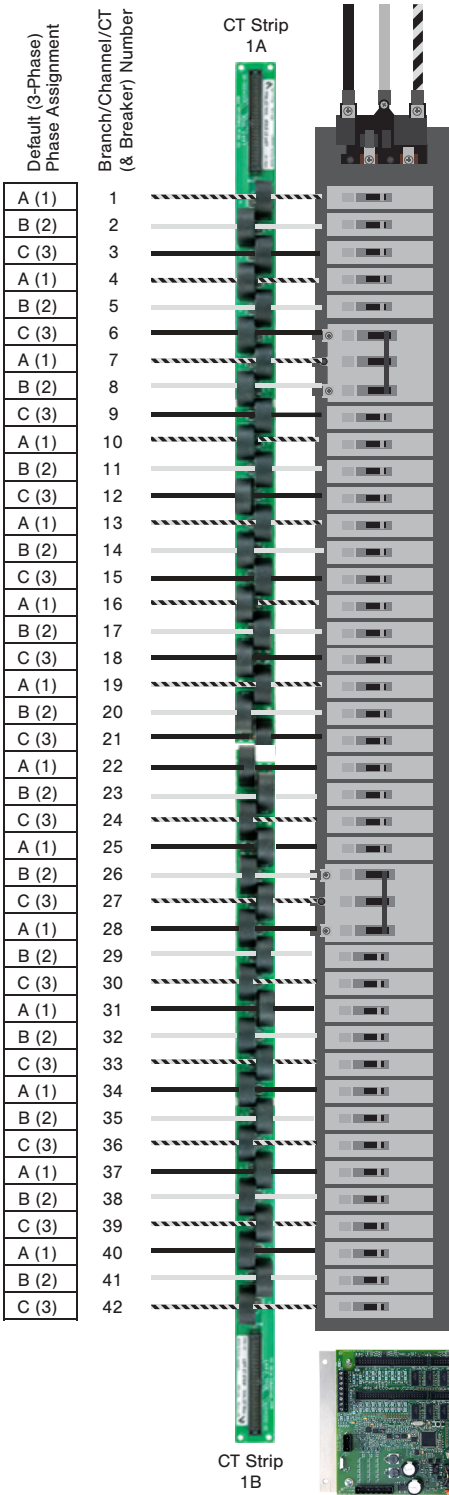

Appendix

#19

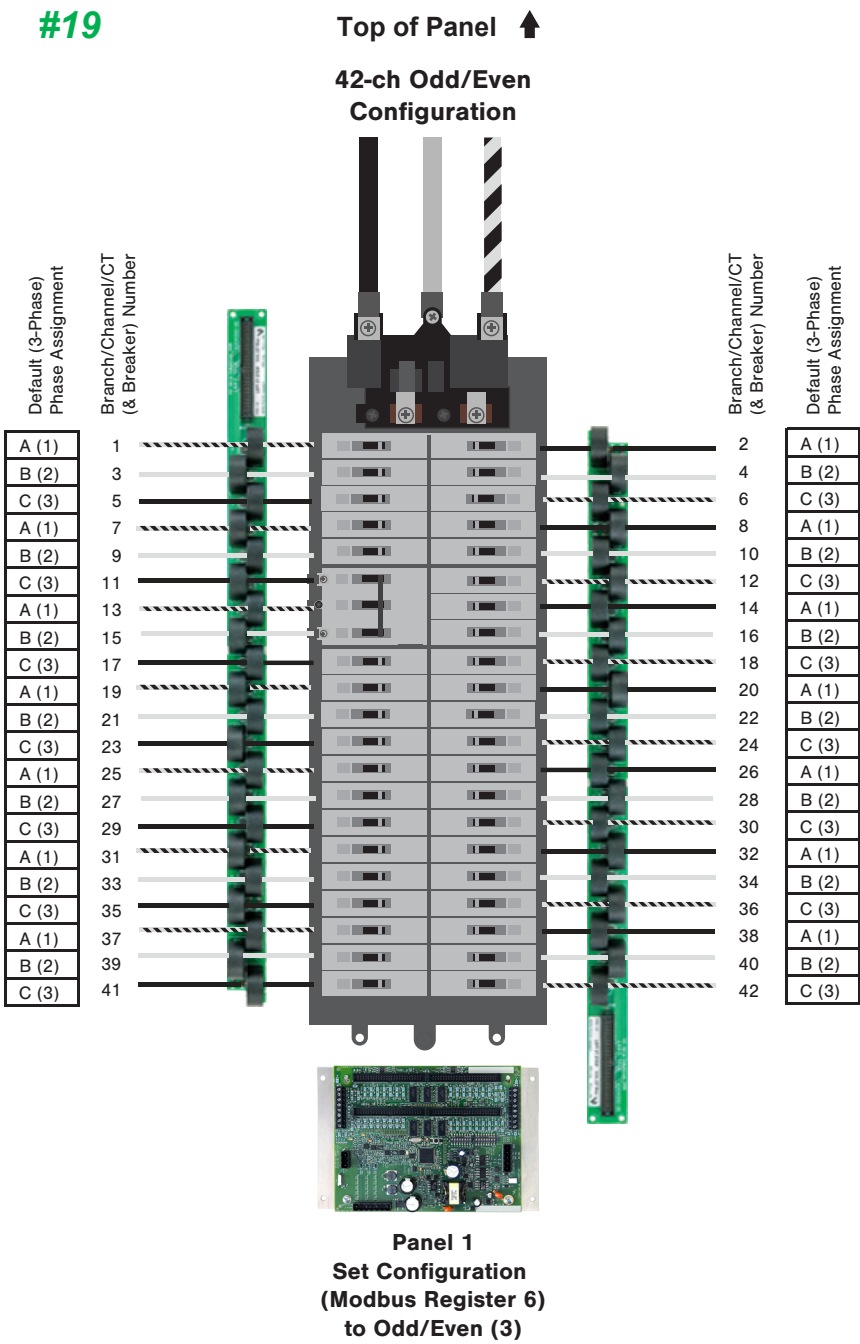


Appendix

#20

Top of Panel ↑

24-ch Sequential
Configuration

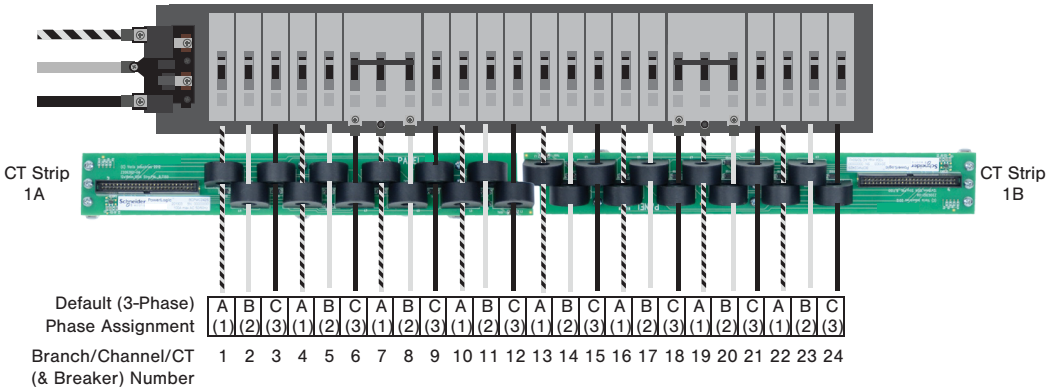


Panel 1
Set Configuration
(Modbus Register 6)
to Sequential (2)

Appendix

#21

Top of Panel ↑

36-ch Sequential
Configuration

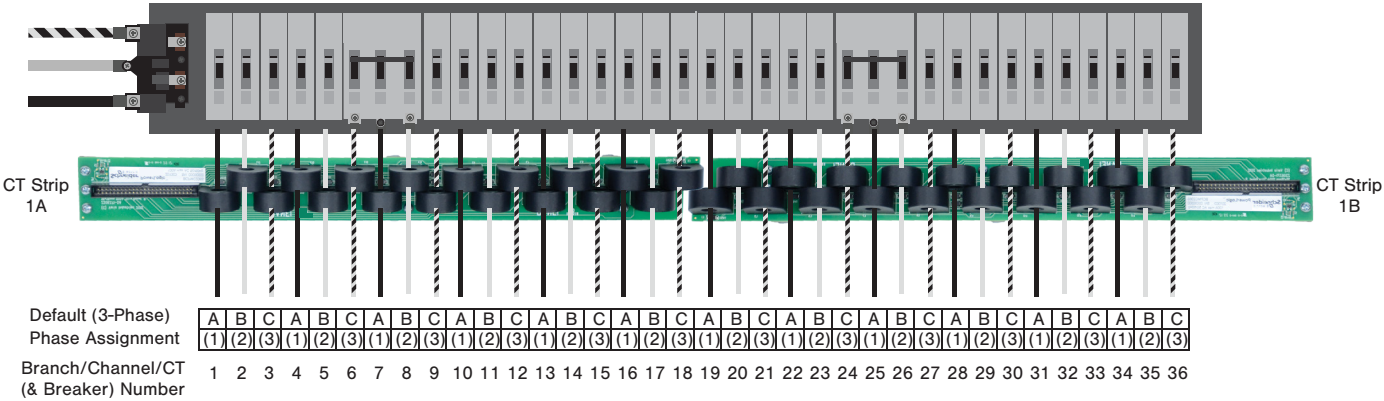



Panel 1
Set Configuration
(Modbus Register 6)
to Sequential (2)

Appendix

#22

Top of Panel ↑

42-ch Sequential
Configuration

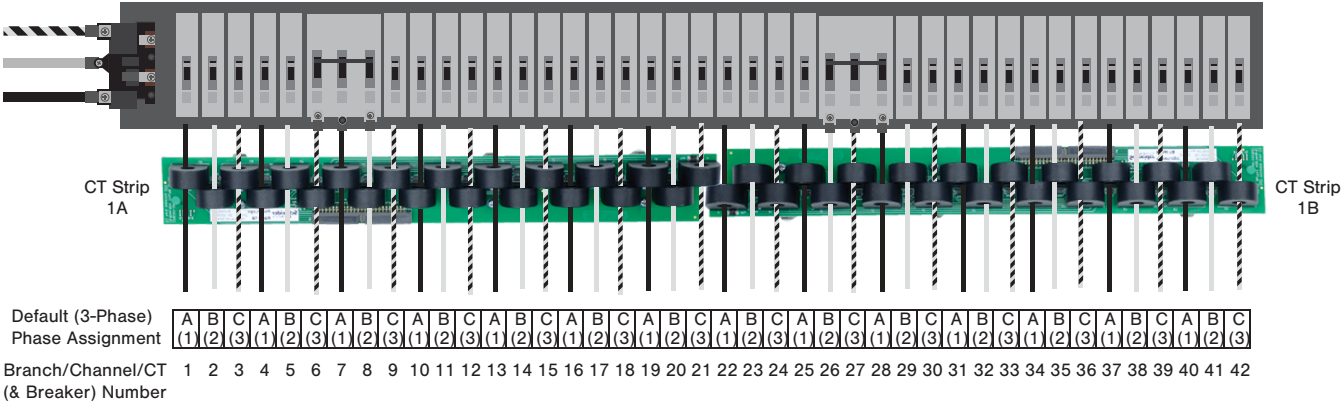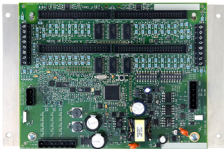


Panel 1
Set Configuration
(Modbus Register 6)
to Sequential (2)

Appendix

#23

Top of Panels ↑

24-ch Dual-Row
Sequential Configuration

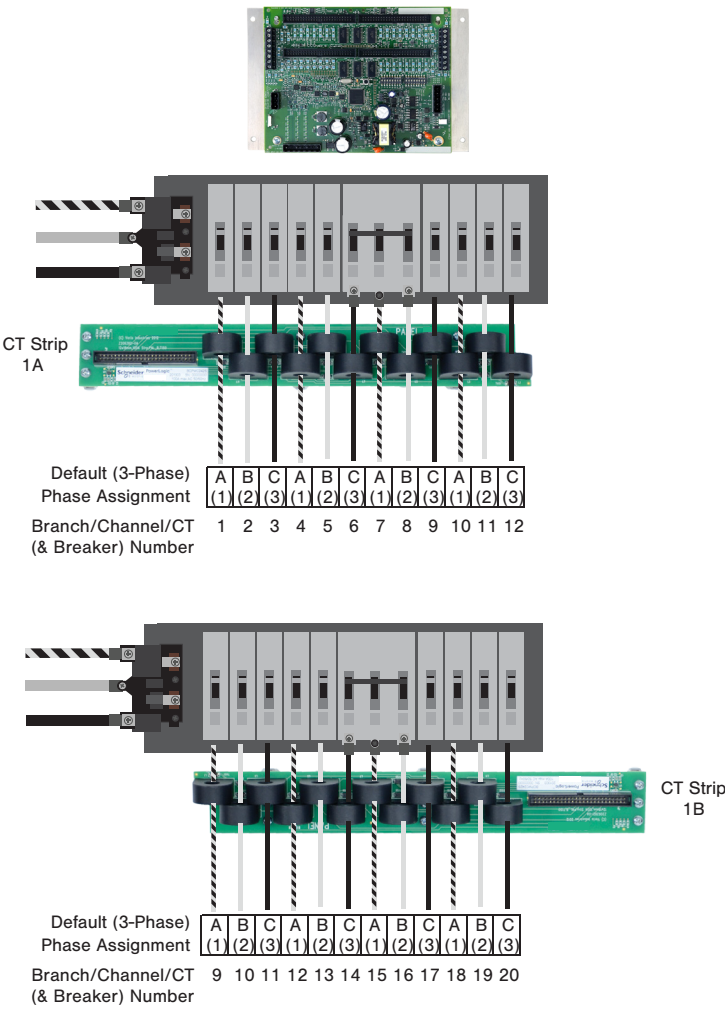

Panel 1
Set Configuration
(Modbus Register 6)
to Sequential (2)

Appendix


#24

Top of Panels ↑

36-ch Dual-Row
Sequential Configuration



Default (3-Phase) Phase Assignment	A	B	C	A	B	C	A	B	C	A	B	C	A	B	C	A	B	C
Branch/Channel/CT (& Breaker) Number	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18

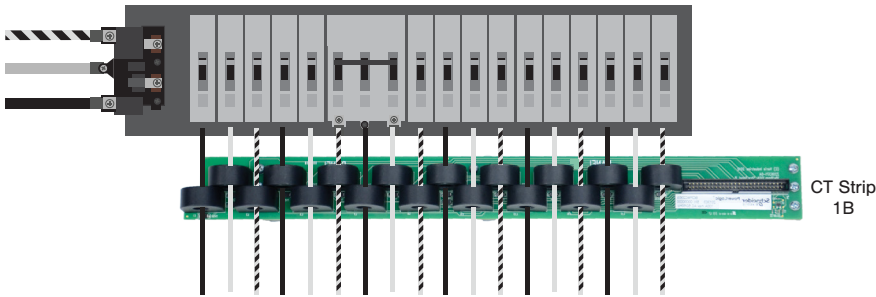

Default (3-Phase) Phase Assignment	A	B	C	A	B	C	A	B	C	A	B	C	A	B	C	A	B	C
Branch/Channel/CT (& Breaker) Number	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36



Panel 1
Set Configuration
(Modbus Register 6)
to Sequential (2)

Appendix

#25

Top of Panels ↑

42-ch Dual-Row
Sequential Configuration

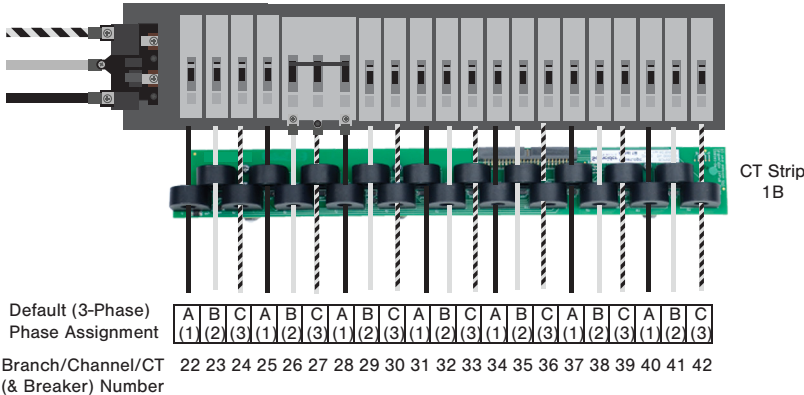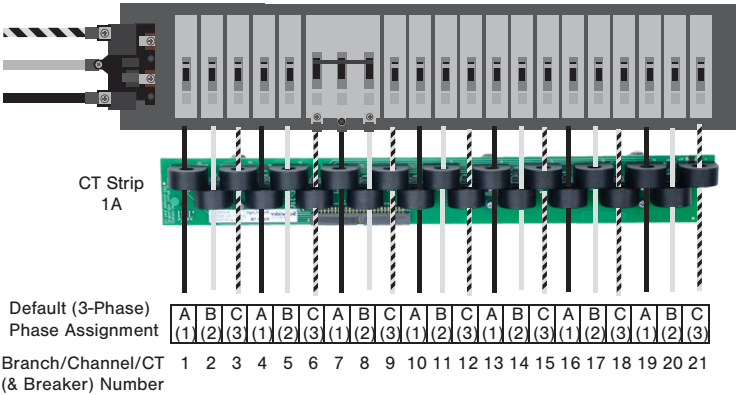


Panel 1
Set Configuration
(Modbus Register 6)
to Sequential (2)

Appendix

#26

Top of Panels ↑

48-ch Dual-Row Sequential Configuration

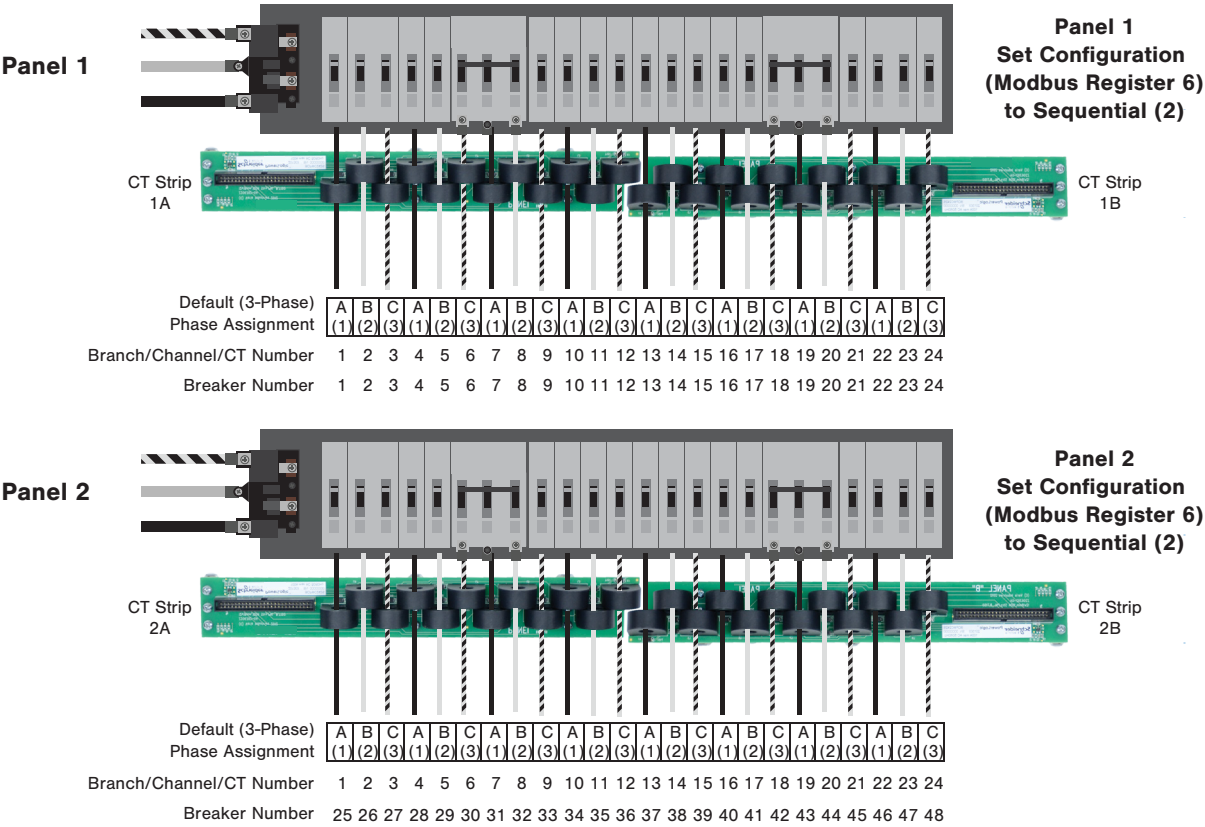


Appendix

#27

Top of Panels ↑

72-ch Dual-Row Sequential Configuration

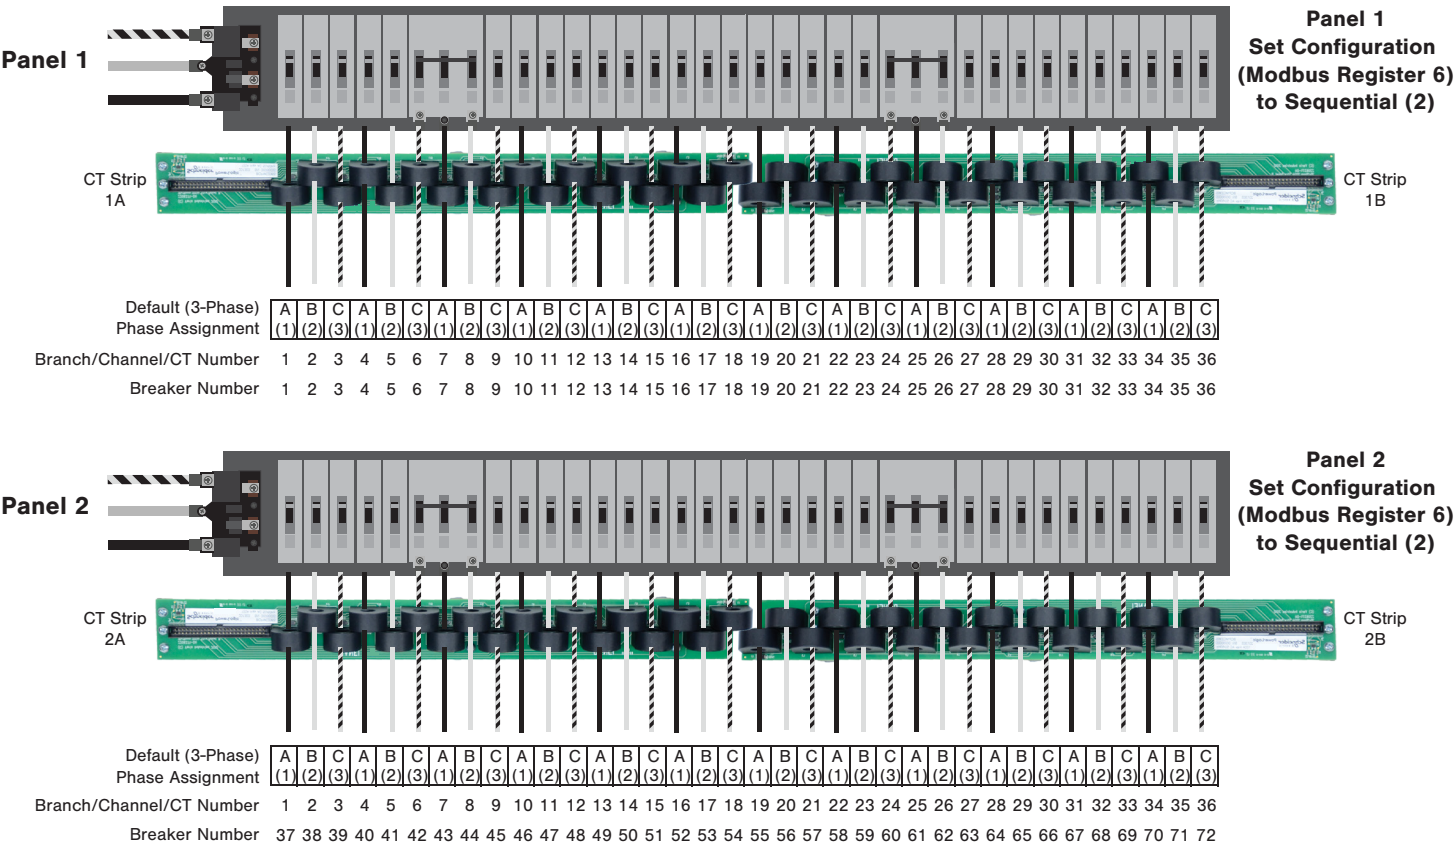

Appendix


#28

Top of Panels ↑

84-ch Dual-Row Sequential Configuration



Panel 1
Set Configuration
(Modbus Register 6)
to Sequential (2)

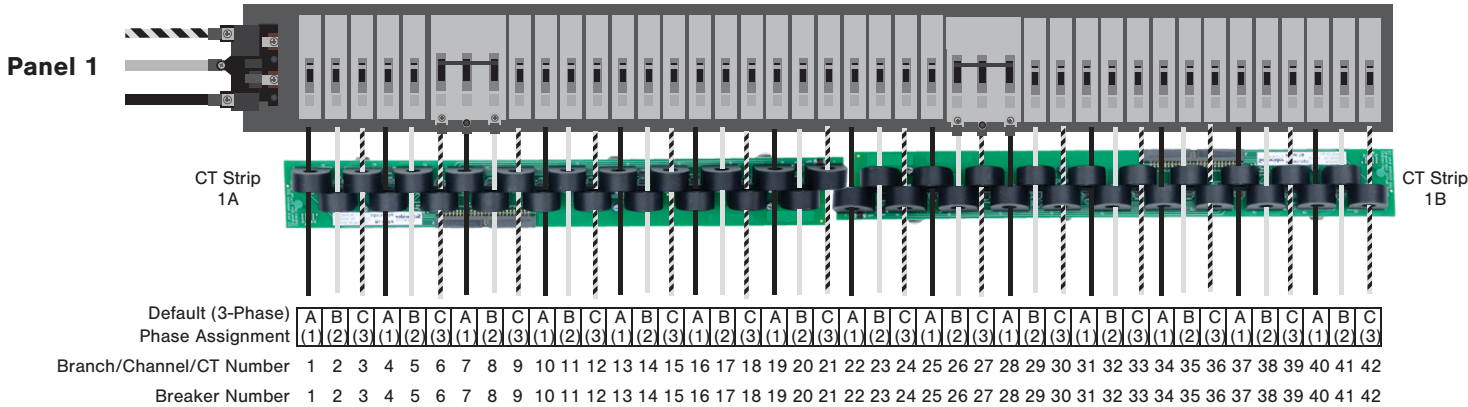

Panel 2
Set Configuration
(Modbus Register 6)
to Sequential (2)

