

RELAYS

INSTALLATION GUIDE

V400







DANGER 🆄

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH


- Follow safe electrical work practices. See NFPA 70E in the USA, or applicable local codes. •
- This equipment must only be installed and serviced by qualified electrical personnel.
- Read, understand and follow the instructions before installing this product.
- Turn off all power supplying equipment before working on or inside the equipment.
- . Use a properly rated voltage sensing device to confirm power is off. DO NOT DEPEND ON THIS PRODUCT FOR VOLTAGE INDICATION

Failure to follow these instructions will result in death or serious injury.

NOTICE

- This product is not intended for life or safety applications.
- Do not install this product in hazardous or classified locations.
- The installer is responsible for conformance to all applicable codes. Mount this product inside a suitable fire and electrical enclosure.

DIMENSIONS

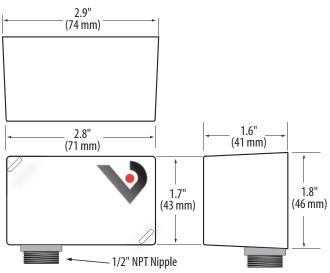

V400 **10A DPDT Enclosed Relay**

Installer's Specifications

Operating Temperature	-34°C to 60°C (-29° to 140°F)
Operating Humidity	10-90% non condensing
Expected Relay Life	Electrical (at rated current): 100,000 cycles
	Mechanical (unpowered): 10,000,000 cycles
Relay Status	LED ON=energized
Wire Specifications:	
Lead Length	14″ (356mm) min.
Gauge	UL1015; Coil: 18AWG; Contacts: 16AWG
Insulation Class	600VAC RMS
Agency Approvals	UL508 enclosed device listing, pollution degree 2

INSTALLATION

Disconnect and lock out all power sources before beginning the installation.

- 1. Using the threaded nipple, connect the relay to the desired enclosure through a knock out hole.
- 2. Secure with the conduit nut provided.
- 3. Connect coil:
 - Choose the coil common lead (white with yellow stripe) and connect it to the common (-) source termination point.
 - Choose either the low voltage (10-30VAC/DC, white with blue stripe) or high voltage (208-277VAC, white with brown stripe) lead, depending on the application requirements, and connect it to the (+) source termination point.*
- 4. Connect relay contacts:
 - Choose the relay common wire (yellow) and connect to the switched load.
 - Choose the relay N.O. (orange) and/or* N.C. (blue) lead and connect to the switched load.
 - Repeat with violet, brown, and grey wires, respectively, for the second set of contacts
- 5. Secure the enclosure and reconnect power.

* Isolate or insulate all non-terminated wires according to local electrical code requirements, i.e. wire nut.


PAGE 1

Alta Labs, Enercept, Enspector, Hawkeye, Trustat, Veris, and the Veris 'V' logo are trademarks or registered trademarks of Veris Industries, L.L.C. in the USA and/or other countries.




V400

WIRING COLOR CODES

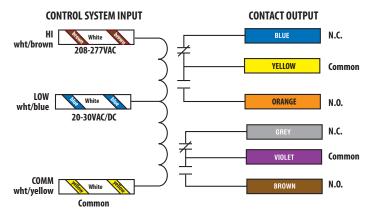

WIRING EXAMPLE



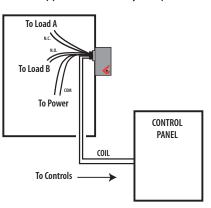

Nipple mount to a 2x or 4x electrical box


CONTACT AND COIL SPECIFICATIONS

TYPICAL COIL PE	RFOR	MANCE	
Pull in Voltage	AC	DC	
20-30V	18	20	
208-277V	186		
Drop Out Voltage	AC	DC	
20-30V	4	5	
208-277V	44		
Voltage	Coil	Current	
	AC	DC	
24V	43mA	25mA	
30V	54mA	31mA	
208V	27mA	-	
277V	36mA	-	

CONTACT RATINGS*

Resistive...... 10A@277VAC, 30VDC **Motor**...... 120VAC, 1/8HP

*Contact ratings are for single pole operation. When operating both poles simultaneousley, the total load cannot exceed the ratings above.

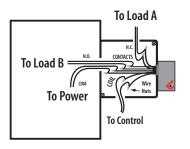

* Isolate any unused wires, e.g. wire nut.

04121